

UNICORN™ 7.0.2

OPC Manual

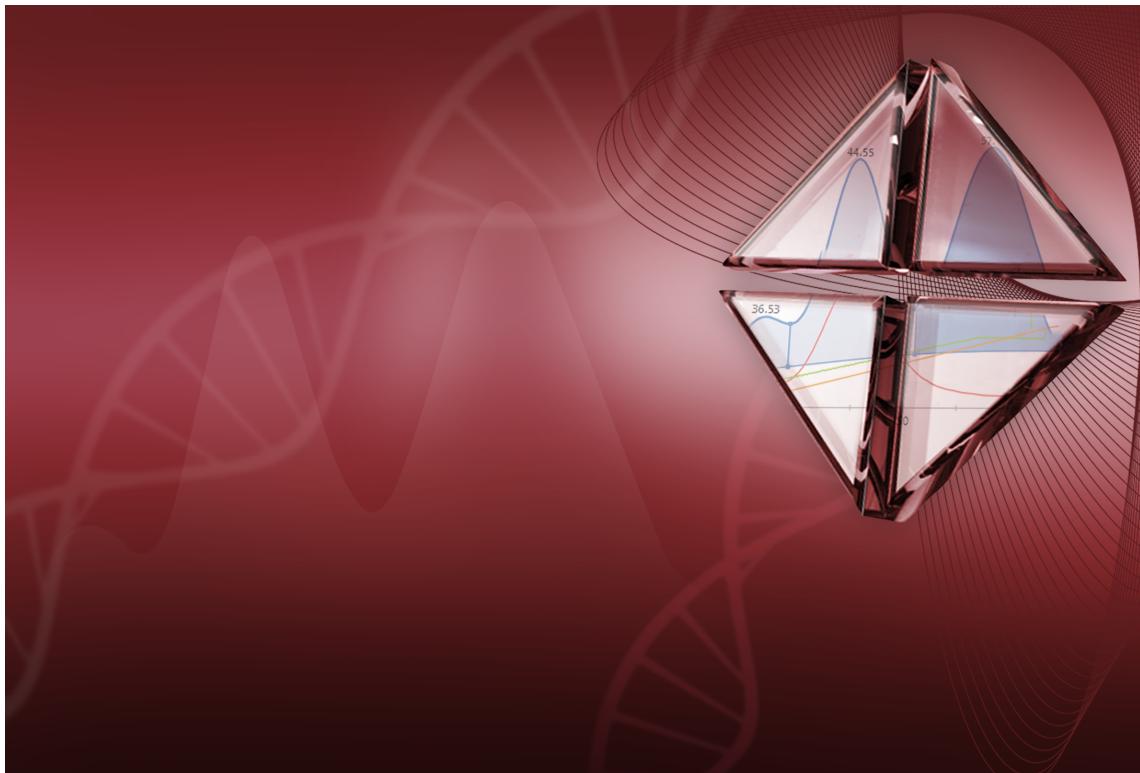


Table of Contents

1	Introduction	4
2	UNICORN OPC server general settings	6
2.1	System start up	7
2.2	Logon security	8
2.3	Take Control	9
3	UNICORN OPC remote	10
3.1	Security settings	11
3.2	Configuration	14
3.3	UNICORN OPC custom error codes	24
3.4	Connection Identifiers	25
4	UNICORN OPC Data Access address space	26
4.1	Introduction	27
4.2	Run data and Picture data	28
4.3	Trend data	30
4.4	Manual instructions	32
4.4.1	Start methods	33
4.4.2	Execute parameter	34
4.4.3	Analog parameter	36
4.4.4	Digital parameter	38
4.4.5	String parameter	40
4.4.6	Virtual output instructions feature	41
4.5	Method execution	42
4.5.1	Scout Run Index	43
4.5.2	Run Method	44
4.5.3	Result Name	46
4.5.4	Batch ID	48
4.5.5	StartNotes	49
4.5.6	MethodNotes	50
4.5.7	PreCompile	51
4.5.8	Questions	52
4.5.9	Variables	54
4.6	State	56
4.6.1	AssignState	57
4.6.2	RunState	59
4.6.3	Command	61
4.6.4	InstrumentConnection	63
4.6.5	InstrumentStatusConnection	64
4.7	Recommendations	66
5	UNICORN OPC Alarms & Events address space	67
5.1	Introduction	68
5.2	Alarms and errors	69
5.3	Event categories	71

6 UNICORN OPC Historical Data Access address space	72
6.1 Introduction	73
6.2 AuditTrail	76
6.3 Result file information	77
6.3.1 Curves	78
6.3.2 Documentation	81
6.3.3 Peak tables	84
6.3.4 Systems	85
6.4 UNICORN OPC HDA XML format definition	86
6.4.1 BufferPro, v 1.0	88
6.4.2 Calibration, v 1.0	89
6.4.3 EvaluationLog, v 1.0	90
6.4.4 Run logbook, v 1.1	91
6.4.5 SignatureList, v 1.0	92
6.4.6 SnapshotList, v 1.0	93
6.4.7 UsedComponents, v 1.0	94
6.4.8 Notes, v 1.0	95
6.4.9 ScoutingList, v 1.1	96
6.4.10 SettingsList, v 1.0	97
6.4.11 TextInstructions, v 1.0	98
6.4.12 VariableList, v 1.1	99
6.4.13 QuestionList, v 1.0	100
6.4.14 PeakTable, v 1.1	101
6.4.15 Unicorn raw, v 1.0	104
6.4.16 Columns, v 1.1	106
6.4.17 EvaluationProcedures, v1.0	108
6.4.18 FracXY, v 1.0	109
6.4.19 AuditTrail, v 1.1	110
6.4.20 Method/Result Instrument Configuration, v 1.0	111
6.4.21 System	112
7 Reference Information	113
7.1 DA server supported OPC interfaces	114
7.2 AE server supported OPC interfaces	116
7.3 HDA server supported OPC interfaces	117
7.4 Differences between UNICORN OPC 5.x and UNICORN OPC 7.0	118

1 Introduction

About this chapter

This chapter contains important user information, compatibility information and a description of the intended use of UNICORN OPC server.

OPC server

UNICORN OPC server provides a standardized integration interface to support integration between UNICORN and other software systems such as Laboratory Information Systems (LIMS) and Manufacturing Execution Systems (MES or SCADA). OPC enables open connectivity via open standards created in collaboration with leading automation manufacturers worldwide, including Microsoft®.

OPC provides inter-operability between system components by creating and maintaining open standard specifications. The benefit of following standard specifications in system implementations is greater independence for hardware and software components. This leads to higher flexibility, better quality and overall lower maintenance costs for the system solution. The first standard developed was the Data Access specification, which therefore has the broadest client support.

UNICORN OPC server supports the following three areas:

- UNICORN OPC Data Access gives access to all process data (i.e., real-time values, valve status, process step information and commands). UNICORN Alarm & Events server informs an OPC client application that a system parameter has exceeded an upper or lower limit value. The UNICORN Alarm & Events server also provides information about the process (**RunLog**).
 - UNICORN Historical Data Access allows any OPC client application to access the entire batch result generated by UNICORN.
 - UNICORN OPC Security controls client access to the UNICORN OPC Data Access, Alarms & Events and Historical Data Access to protect sensitive information and to guard against unauthorized modification of process parameters. This is an important security feature.
-

UNICORN server supported OPC standards and versions

UNICORN 7.0.2 supports:	
Data Access (DA)	1.0 custom interface 2.05A custom interface 3.0 custom interface
Alarms & Events (A&E)	1.1 custom interface
Historical Data Access (HDA)	1.1 custom interface 1.2 custom interface
Security	1.0 custom interface

To ensure high compatibility, UNICORN OPC has been compliance tested. See the OPC homepage:

www.opcfoundation.org

This document requires basic knowledge of UNICORN, as well as OPC clients. Refer to the UNICORN manuals and *Application Notes* for detailed information about configuring OPC for specific OPC clients.

2 UNICORN OPC server general settings

About this chapter

This chapter provides the required system settings for the OPC server.

In this chapter


This chapter contains the following sections:

Section	See page
2.1 System start up	7
2.2 Logon security	8
2.3 Take Control	9

2.1 System start up

UNICORN Administration

When the server is executed, it first checks the basic configuration. This basic configuration is adjustable from **UNICORN Administration's Options** dialog box for HDA server and **Advanced Settings** dialog in **System Properties** for AE and DA servers (**Tools:System Properties>Edit:Advanced Settings**).

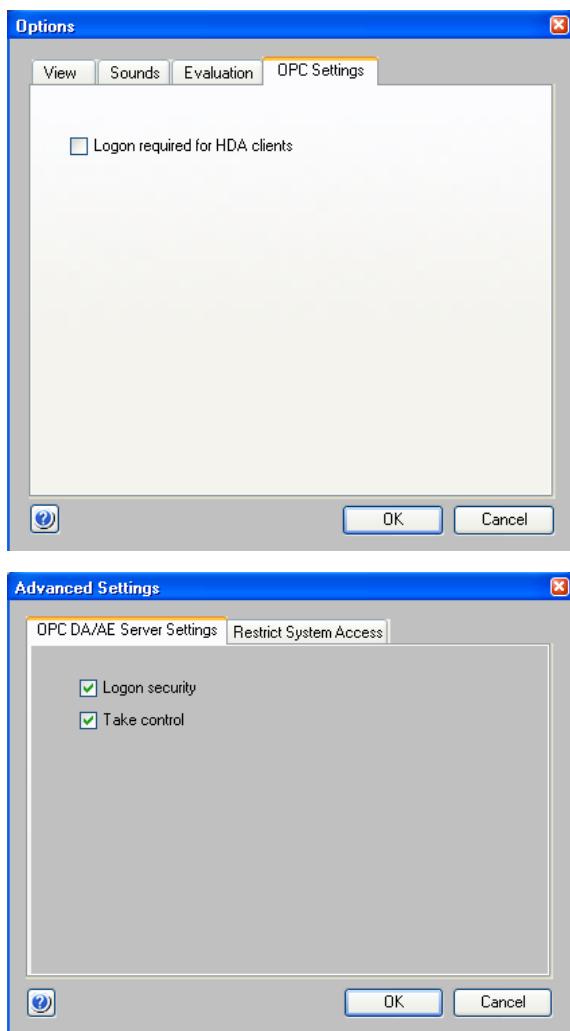

2 UNICORN OPC server general settings

2.2 Logon security

2.2 Logon security

Introduction

UNICORN OPC server supports OPC private security. When enabled, the client must log in before accessing any items.

All UNICORN users can log into OPC by giving username with/without the access group to which user belongs to. For example "username@accessgroupname" or "username". If the access group is not given during login, then the first available access group for that user will be taken. User access rights are depending on the access group chosen. It is not possible to change password or administer users through OPC. User management is handled through UNICORN **Administration** module.

Logon security enables the OPC security interface. Since not all clients support this interface, the default installation setting is **OFF**. When the interface is enabled, the server requires all clients to login before they can access data. This applies to all interfaces, that is, DA, AE or HDA.

OPC interface dependencies

Security v 1.0		
Data Access v 1.0, 2.05A, 3.0	Alarms & Events v 1.1	Historical Data Access v 1.2

If the **Logon security** option is **OFF**, the server disables the security interface. Instead, it uses "OPC" user when communicating with UNICORN.

2.3 Take Control

The **Take Control** flag is used when OPC is connecting to the system. If the flag is set to **ON**, the **AssignState** is set to **Connected in control**. Otherwise, it is set to the default value **Connected in view**. However, if another user already has control over the system, OPC is assigned **Connected in view** state.

3 UNICORN OPC remote

About this chapter

This chapter contains information about configuring remote access, recommended settings and the related error codes.

In this chapter


This chapter contains the following sections:

Section	See page
3.1 Security settings	11
3.2 Configuration	14
3.3 UNICORN OPC custom error codes	24
3.4 Connection Identifiers	25

3.1 Security settings

UNICORN OPC supports remote access via DCOM. Some DCOM security settings might have to be altered to get it to work. The configuration can be changed through **Component Services**.

Component Services

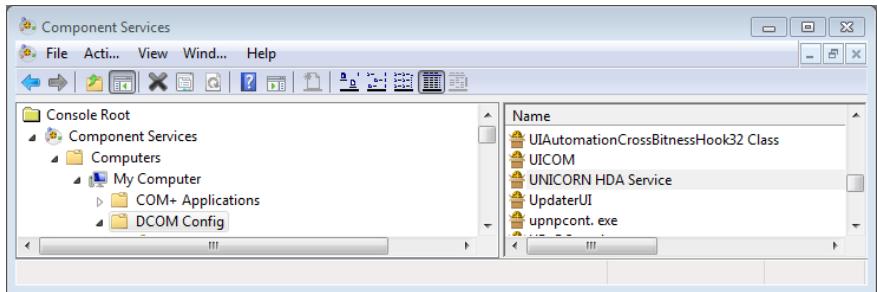


The recommended security settings for **UNICORN HDA Service** and **UNICORN Instrument Server** are shown below. (For detailed instructions see [Troubleshoot communication issues, on page 14](#))

3 UNICORN OPC remote

3.1 Security settings


- Add **Access Permission** to the users **ANONYMOUS LOGON**, **Everyone**, **INTERACTIVE**, **NETWORK** and **SYSTEM**.

UNICORN Access Permission window

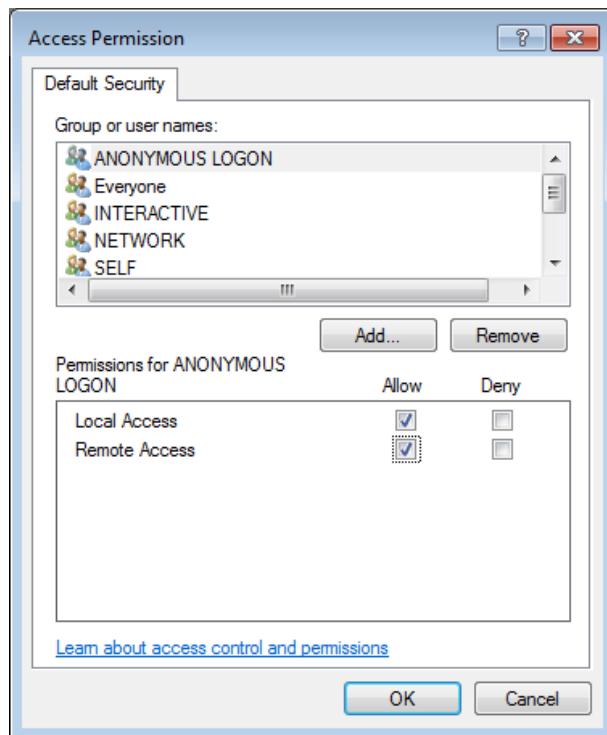

- Set *Which user do you want to use to run this application?* in the **Identity**-tab to **The system account (services only)**.

UNICORN HDA Server Properties window

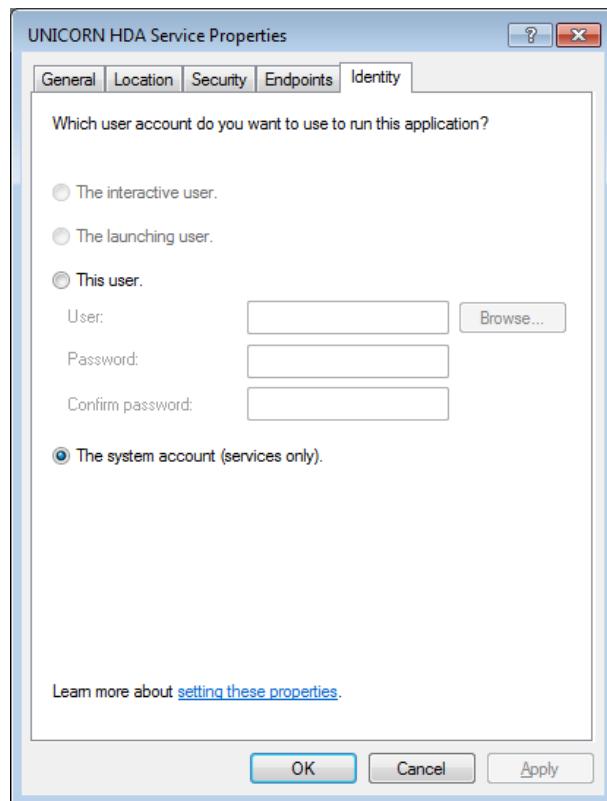

Open DCOM communications port

If you are using a firewall make sure that port 135 is open.

3.2 Configuration

Use domain users

It is easier to setup a secure OPC communication between a remote OPC client and the OPC server if the computers in the network are connected to a domain server and the domain users are logged onto each computer.

If the computers are not connected to a domain, add them to a workgroup and create users with the same credentials on all computers in the network.

DCOM call/activation log

Detailed information on error caused by incorrect DCOM configuration is logged in the Windows event log. Follow the instruction below to retrieve the information.

In the registry below the key `HKEY_LOCAL_MACHINE\SOFTWARE\Microsoft\Ole\` add the following **DWORD** values:

- ActivationFailureLoggingLevel - **DWORD** value with value 1.
 - CallFailureLoggingLevel - **DWORD** value with value 1.
-

Troubleshoot communication issues

Communication failure between an OPC client and an OPC server is often caused by DCOM security issues. There is no DCOM configuration that works on all systems since it depends on the operating system used, network settings, computer configuration and the required security level.


Note: *In case of communication issues, it is recommended to first remove all DCOM security settings to get the communication working and then gradually increase the security level.*

Follow the instructions below to troubleshoot communication issues.

- 1 Turn off Windows firewall.
- 2 Change local security policy
- 3 Change default (system wide) DCOM settings
- 4 Change server specific DCOM configuration

Change local security policy

Step	Action
1	Type "Local Security Policy" in the Windows Start menu search field, click the Local Security Policy item that is displayed as the search result.
2	Expand Security Settings:Local Policies:Security Options

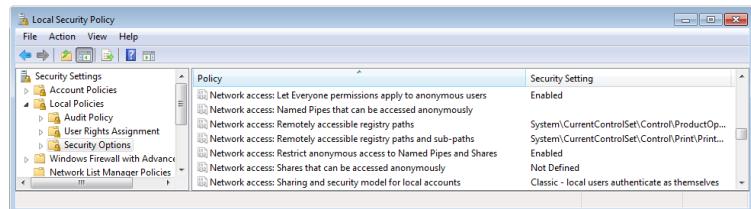

-
- 3 Set **Network access: Let Everyone permissions apply to anonymous users** to **Enabled**.
 - 4 Set **Network access: Sharing and security model for local accounts** to **Classic – local users authenticate as themselves**.


Change default (system wide) DCOM settings

Step	Action
1	Type "Component Services" in the Windows Start menu search field, click the Component Services item that is displayed as the search result.


3 UNICORN OPC remote

3.2 Configuration

Step	Action
2	Expand Component Services:Computers . Right-click My Computer , then select Properties . In Default Properties tab set Default Authentication Level to Connect .

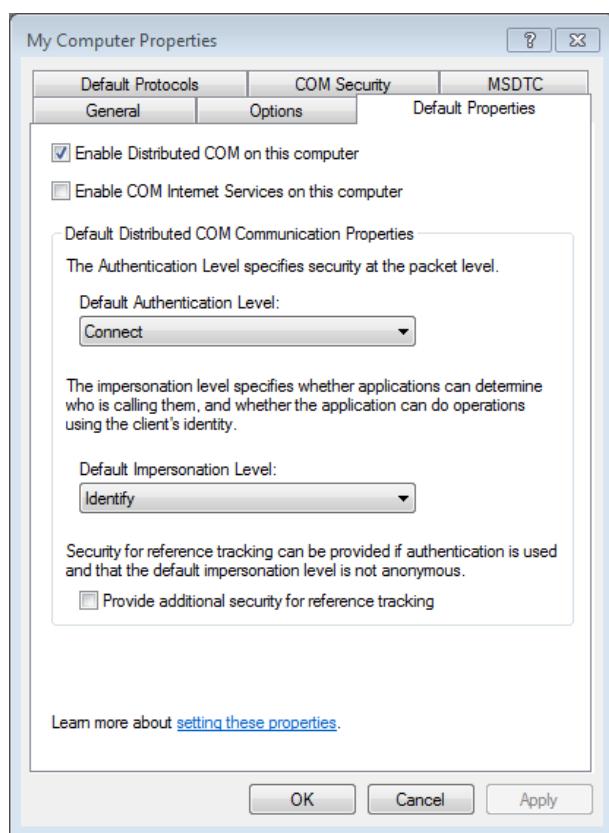


- | Step | Action |
|------|--|
| 3 | In COM Security tab, Access Permissions pane, click Edit Limits . |
| 4 | Add Interactive , Network and System users. Set the Everyone , Interactive , Network and System users to have both Local Access and Remote Access . Click OK . |

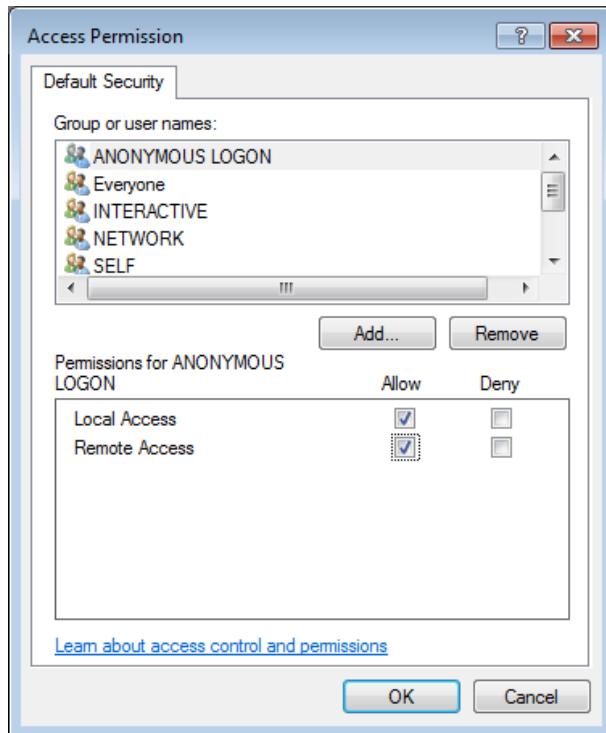

3 UNICORN OPC remote


3.2 Configuration

- | Step | Action |
|------|--|
| 5 | In COM Security tab, Launch and Activation Permissions pane, click Edit Limits . |
| 6 | Add Anonymous Logon , Interactive , Network , System and Everyone . Set them to have Local Launch , Remote Launch , Local Activation and Remote Activation permissions. |

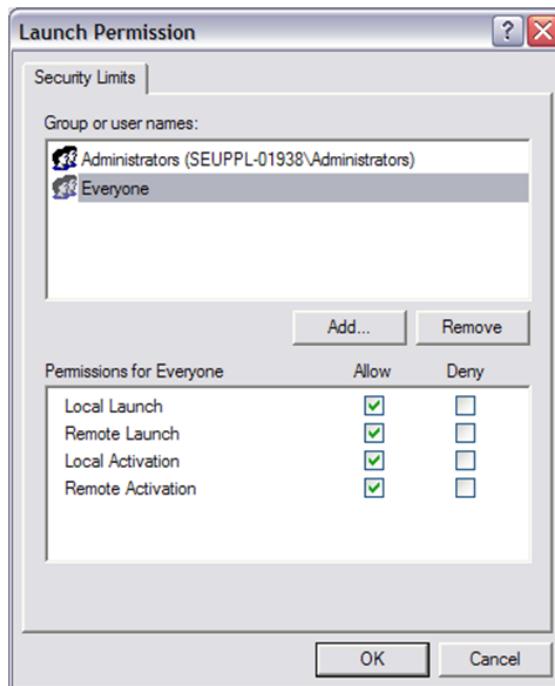

- | | |
|---|---|
| 7 | Click OK to close the Launch Permission window. |
|---|---|


Change server specific DCOM configuration

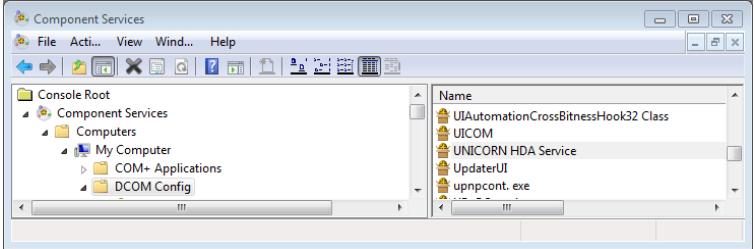- | Step | Action |
|--|--|
| 1 | Expand Component Services:Computers:My Computer:DCOM Config . Answer Yes on any question asked when expanding DCOM Config . |
|  | |
| 2 | Locate UNICORN HDA Service , UNICORN Instrument Server and OpcEnum in the list. |
| 3 | Right-click UNICORN HDA Service , select Properties . |

3 UNICORN OPC remote

3.2 Configuration

Step	Action
4	In the General tab, set Authentication level to Connect .

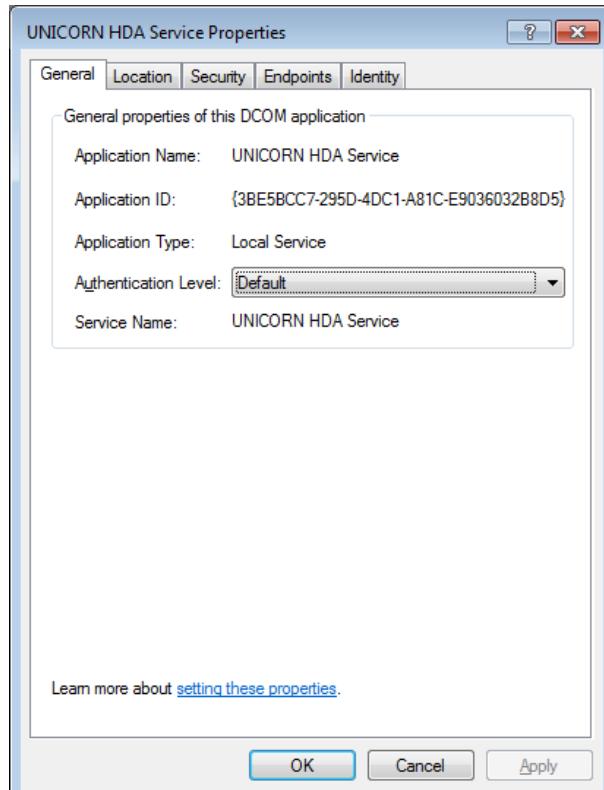


The screenshot shows the 'UNICORN HDA Service Properties' dialog box. The 'General' tab is selected. The dialog displays the following information:

- Application Name: UNICORN HDA Service
- Application ID: {3BE5BCC7-295D-4DC1-A81C-E9036032B8D5}
- Application Type: Local Service
- Authentication Level: Default (selected in a dropdown menu)
- Service Name: UNICORN HDA Service

At the bottom of the dialog, there is a link: 'Learn more about [setting these properties](#)'. The dialog has standard Windows-style buttons at the bottom: OK, Cancel, and Apply.


Step	Action
5	In the Identity tab, set Authentication level to The system account (services only) (or to The interactive user , if not a service)

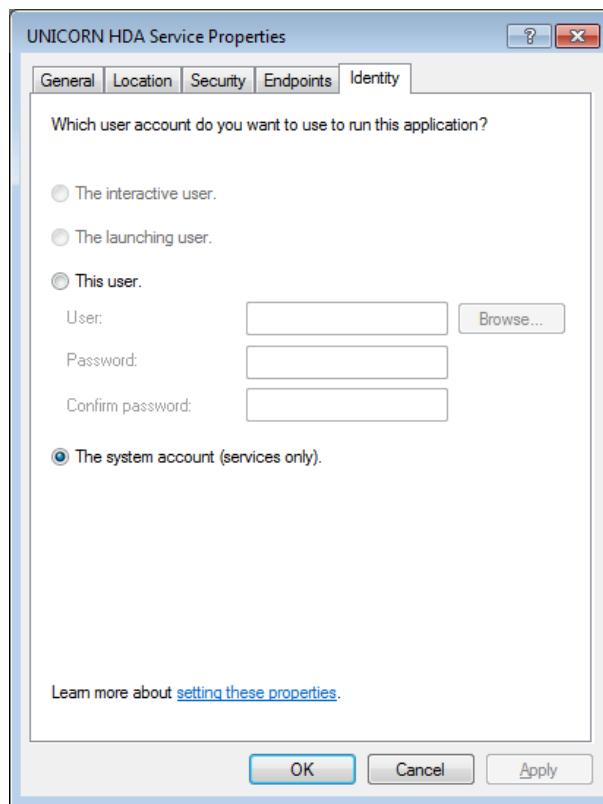

3 UNICORN OPC remote


3.2 Configuration

- | Step | Action |
|------|--|
| 6 | Click the Security tab, then in the Launch and Activation Permissions pane click Customize , then click Edit . |
| 7 | Set the INTERACTIVE , NETWORK , Everyone and SYSTEM users Permissions to Allow Local Launch , Remote Launch , Local Activation and Remote Activation .. |

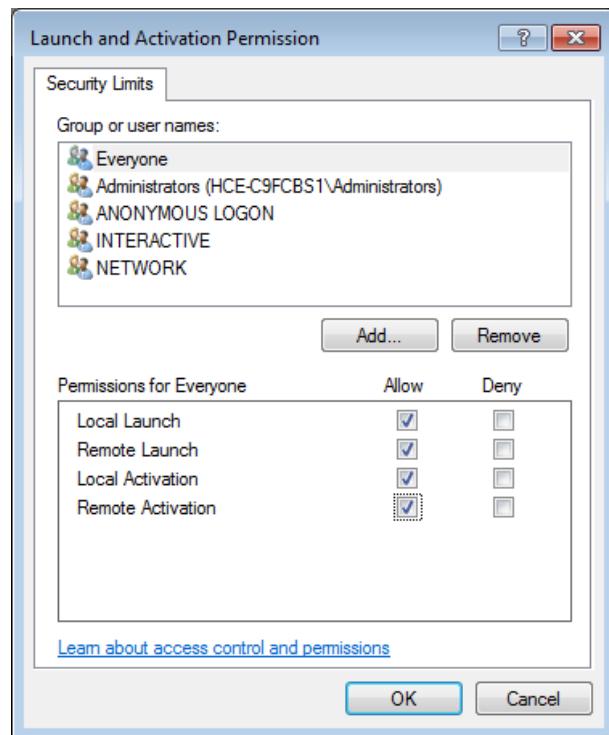

- | | |
|---|---|
| 8 | Click OK to close the Launch and Activation Permissions window. |
|---|---|

- | Step | Action |
|------|--|
| 9 | In the Access Permissions pane click Customize , then click Edit . |
| 10 | Set the INTERACTIVE , NETWORK , Everyone and SYSTEM users Permissions to Allow Local Access and Remote Access . |

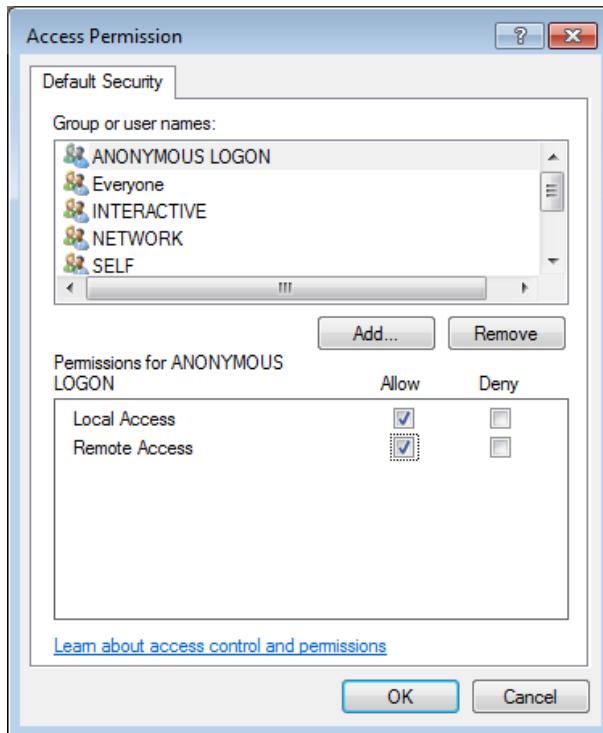

- | | |
|----|---|
| 11 | Click OK to close the Access Permission window |
| 12 | Click OK to close the UNICORN HDA Service Properties window. |
| 13 | Redo step 3 to 12 for UNICORN Instrument Server and OpcEnum . |

3 UNICORN OPC remote

3.3 UNICORN OPC custom error codes

3.3 UNICORN OPC custom error codes

The server defines several custom error codes that extend the OPC error codes. They are returned when reading or writing items. The error codes can be avoided by checking the **OPC_PROP_RIGHTS** property (for OPC Data Access) of an item. UNICORN OPC defines **UNICORN_OPC_SECURITYACCESS** and **UNICORN_OPC_CONTROLACCESS** to indicate if the item is accessible or not.

Custom error code	is returned if...
UNICORN_OPC_E_ACCESSDENIED (0xC0048002)	...the client tries to read/write to an item to which, the user for some reason currently does not have access. If security is enabled, the error code is returned if no user is logged in or if access to the user set-up of UNICORN is denied.
UNICORN_OPC_E_NOTINCONTROL (0xC0048003)	...the client tries to write to an item and the OPC server is not in control of the system. To gain control, write Control (1) to the AssignState item in the STATE branch. If another UNICORN user is in control of the system, taking control will fail.
ServerVendorEFailedToTakeControl (0xC0048004)	...the client failed to get control of the system.
ServerVendorEQuestionsNotAnswered (0xC0048006)	...a mandatory question is not answered prior to starting a method run.

3.4 Connection Identifiers

An OPC client can connect to the below connection identifiers, respectively, for DA, AE and HDA servers:

OPCinter- face	ProgID	CLSID
DA 2.05A	UNICORN_DAServer20.System1.1	{03635E5D-8B72-4A00-99B9-692AC7451F83}
DA 3.0	UNICORN_DAServer30.System1.1	{1A509DE1-6B6C-47AC-B629-B5894F9D80B6}
AE 1.1	UNICORN_AEServer11.System1.1	{0FEB68A8-BC41-4D98-AB5C-8374A2F2C1F3}
HDA 1.2	UNICORN_HDAServer12.1	{E6E8E03C-A36E-4F6F-9FB-F279D12A0188}

4 UNICORN OPC Data Access address space

About this chapter

This chapter provides information about UNICORN OPC Data Access address space, method execution, settings, run data, picture data, etc.

In this chapter


This chapter contains the following sections:

Section	See page
4.1 Introduction	27
4.2 Run data and Picture data	28
4.3 Trend data	30
4.4 Manual instructions	32
4.5 Method execution	42
4.6 State	56
4.7 Recommendations	66

4.1 Introduction

The OPC Data Access (DA) address space is a real-time representation of process control data for connected instruments.

Data Access address space view

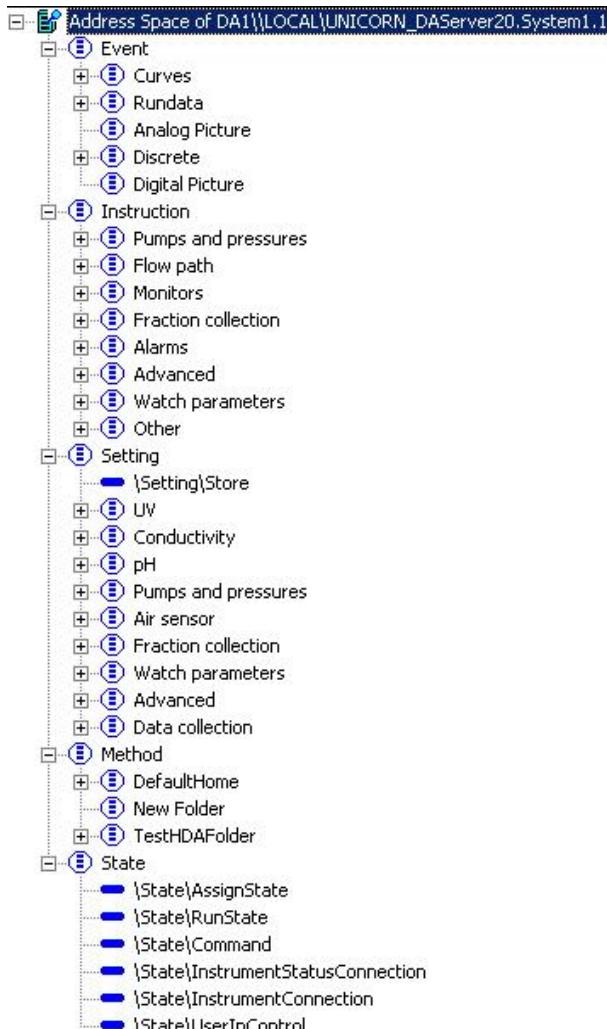

Tip: The address space depends on the instrument configuration. Different items will appear depending on the instrument configuration used.

4 UNICORN OPC Data Access address space

4.2 Run data and Picture data

4.2 Run data and Picture data

Introduction

UNICORN run data are available via the EVENT\Rundata branch and, can be analog or digital depending on data type. Picture data are available via EVENT\ANALOGPICTURE and EVENT\DIGITALPICTURE.

Example location (<=> **OPC total Item ID**) in server configuration tree:

```
Event\Rundata\Accumulated time  
Event\Rundata\System flow  
Event\Rundata\BufferPrep  
Event\Analog Picture\UV1  
Event\Digital Picture\Frac Comp
```

Properties for analog data

Properties for analog data are:

PID	Description	Data type
1	Canonical data type	<i>VT_I2</i>
2	Current value	<i>VT_R4</i> or <i>VT_I4</i>
3	Quality	<i>VT_I2</i>
4	Timestamp	<i>VT_DATE</i>
5	Access rights	<i>VT_I4</i>
6	Server scan rate	<i>VT_R4</i>
7	EU type	<i>VT_I4</i>
8	Value texts	<i>VT_ARRAY:VT_BSTR</i>
100	EU unit	<i>VT_BSTR</i>
102	High EU	<i>VT_R8</i>
103	Low EU	<i>VT_R8</i>
5001	Decimals	<i>VT_R8</i>

Properties for binary data

Properties for binary data are:

PID	Description	Data type
1	Canonical data type	<i>VT_I2</i>
2	Current value	<i>VT_I4</i>
3	Quality	<i>VT_I2</i>
4	Timestamp	<i>VT_DATE</i>
5	Access rights	<i>VT_I4</i>
6	Server scan rate	<i>VT_R4</i>
7	EU type	<i>VT_I4</i>
8	Value texts	<i>VT_EMPTY</i>
102	Maximum value	<i>VT_R8</i>
103	Minimum value	<i>VT_R8</i>

4 UNICORN OPC Data Access address space

4.3 Trend data

4.3 Trend data

UNICORN trend data are available via the `EVENT\Curves`. These data have the highest resolution. ***ANALOGTREND*** data are always an array of values.

BINARYTREND data

BINARYTREND contains textual trending data:

Data	Description
<i>CurrentMethod</i>	Name of the current running method.
<i>CurrentResult</i>	Name of the current result to which the method run is saved.
<i>CurrentScouting</i>	Scouting number.
<i>CurrentBlock</i>	Name of the block currently executing.
<i>RunLog</i>	Messages for the current run.
<i>Fractions</i>	Current fraction mark.
<i>Injections</i>	Current injection mark.

Example location (<=> ***OPC total Item ID***) in server configuration tree:

`Event\Curves\UV1`

`Event\Discrete\Injections`

Properties for analog data

Properties for analog data are:

PID	Description	Data type
1	Canonical data type	<i>VT_I2</i>
2	Current value	<i>VT_ARRAY VT_R4</i>
3	Quality	<i>VT_I2</i>
4	Timestamp	<i>VT_DATE</i>
5	Access rights	<i>VT_I4</i>
6	Server scan rate	<i>VT_R4</i>
100	EU unit	<i>VT_BSTR</i>

PID	Description	Data type
102	Maximum value	<i>VT_R8</i>
103	Minimum value	<i>VT_R8</i>
5001	Decimals	<i>VT_R8</i>

Properties for binary data

Properties for binary data are:

PID	Description	Data type
1	Canonical data type	<i>VT_I2</i>
2	Current value	<i>VT_BSTR</i>
3	Quality	<i>VT_I2</i>
4	Timestamp	<i>VT_DATE</i>
5	Access rights	<i>VT_I4</i>
6	Server scan rate	<i>VT_R4</i>

4.4 Manual instructions

About this section

UNICORN manual instructions from the **Manual Instructions** box in **System Control** are available in the **INSTRUCTION** branch. To execute an instruction, first enter the parameter values and then enter 0 or 1 to execute the item.

If the instruction in UNICORN uses text, it is possible to get that text from the EU type.

During method runs, manual instruction parameters will be updated with current values, that is, flow changes are reflected in the flow parameter.

In this section

This chapter contains the following subsections:

Section	See page
4.4.1 Start methods	33
4.4.2 Execute parameter	34
4.4.3 Analog parameter	36
4.4.4 Digital parameter	38
4.4.5 String parameter	40
4.4.6 Virtual output instructions feature	41

4.4.1 Start methods

It is recommended not to start runs by sending manual commands from OPC.

Note: *It is recommended not to start manual runs via OPC. Start methods instead and then send manual commands only if needed during the method run.*

4 UNICORN OPC Data Access address space

4.4 Manual instructions

4.4.2 Execute parameter

4.4.2 Execute parameter

Introduction

Execute parameter is related to instruction information of the instrument configuration. The parameter name is constructed by adding “_Execute” to the actual instruction name. Set the scan rate to the fastest update rate of the server (i.e., 500 ms).

The canonical data type is **VT_I2**. The instruction description is read from instrument configuration.

Instruction execute objects are only **OPC_WRITABLE**. Writing 0 or 1 executes the instruction.

Note: *The instructions can only be executed if the module is in control of UNICORN system.*

Instruction execution leads to run state **MANUAL (5)**, unless already in **RUN** state. It is possible to change run state to **END (4)** by using the state control object.

Quality is good on successful execution of the instruction, i.e., the corresponding manual command is successfully submitted.

Implemented properties

Implemented execute parameter properties are:

PID	Description	Data type
1	Canonical data type	VT_I2
2	Current value	VT_EMPTY
3	Quality	VT_I2
4	Timestamp	VT_DATE
5	Access rights	VT_I4
6	Server scan rate	VT_R4
7	EU type	VT_I4
8	Value texts	VT_ARRAY:VT_BSTR
101	Item description	VT_BSTR
102	Maximum value	VT_R8
103	Minimum value	VT_R8

4 UNICORN OPC Data Access address space

4.4 Manual instructions

4.4.2 Execute parameter

Example location ($\Leftarrow\Rightarrow$ OPC total Item ID) in server configuration tree:

\Instruction\Pumps and pressures\System flow\System flow_Execute

4 UNICORN OPC Data Access address space

4.4 Manual instructions

4.4.3 Analog parameter

4.4.3 Analog parameter

Introduction

Unit, parameter description, minimum and maximum values are read from instrument configuration. The canonical data type is either **VT_I4** or **VT_R4**. If instrument configuration position names are defined, the EU type becomes **OPC_ENUMERATED**, otherwise **OPC_ANALOG**. Set the scan rate to the fastest update rate of the server (i.e., 500 ms).

Analog parameter objects are both **OPC_READABLE** and **OPC_WRITABLE**, but only from/to **CACHE**. When executing an instruction (described above), the **CACHE** value is included in the manual command structure.

Note: *The instructions can only be executed if the module is in control of UNICORN system.*

Implemented properties

Implemented analog parameter properties are:

PID	Description	Data type
1	Canonical data type	VT_I2
2	Current value	VT_R4 or VT_I4
3	Quality	VT_I2
4	Timestamp	VT_DATE
5	Access rights	VT_I4
6	Server scan rate	VT_R4
7	EU type	VT_I4
8	Value texts	VT_ARRAY:VT_BSTR
100	EU unit	VT_BSTR
101	Item description	VT_BSTR
102	High EU	VT_R8
103	Low EU	VT_R8
5001	Decimals	VT_R8

Example location (<=> **OPC total Item ID**) in server configuration tree:

4 UNICORN OPC Data Access address space

4.4 Manual instructions

4.4.3 Analog parameter

\Instruction\Pumps and pressures\System flow\Flow rate

4 UNICORN OPC Data Access address space

4.4 Manual instructions

4.4.4 Digital parameter

4.4.4 Digital parameter

Introduction

The canonical data type is always **VT_I2**. Parameter description, open and close labels are read from instrument configuration. If instrument configuration position names are defined, the EU type becomes **OPC_ENUMERATED**, otherwise **OPC_NOENUM**. Set the scan rate to the fastest update rate of the server (i.e., 500 ms).

Digital parameter objects are both **OPC_READABLE** and **OPC_WRITABLE**, but only from/to **CACHE**. When executing an instruction (described above), the **CACHE** value is included in the manual command structure.

Note: *The instructions can only be executed if the module is in control of UNICORN system.*

Implemented properties

Implemented digital parameter properties are:

PID	Description	Data type
1	Canonical data type	VT_I2
2	Current value	VT_I2
3	Quality	VT_I2
4	Timestamp	VT_DATE
5	Access rights	VT_I4
6	Server scan rate	VT_R4
7	EU type	VT_I4
8	Value texts	VT_ARRAY:VT_BSTR
100	EU unit	VT_BSTR
101	Item description	VT_BSTR
106	Maximum value	VT_R8
107	Minimum value	VT_R8
5001	Decimals	VT_R8

Example location (<=> **OPC total Item ID**) in server configuration tree:

4 UNICORN OPC Data Access address space

4.4 Manual instructions

4.4.4 Digital parameter

\Instruction\Flow path\Inlet A\Position

4 UNICORN OPC Data Access address space

4.4 Manual instructions

4.4.5 String parameter

4.4.5 String parameter

Introduction

The canonical data type is always **VT_BSTR**. The EU type is always **OPC_NOENUM**. Set the scan rate to the fastest update rate of the server (i.e., 500 ms).

String parameter objects are both **OPC_READABLE** and **OPC_WRITABLE**, but only from/to **CACHE**. When executing an instruction (described above), the **CACHE** value is included in the manual command structure. The actual parameter is converted to an integer value before the instruction is executed.

Note: *The instructions can only be executed if the module is in control of UNICORN system.*

Implemented properties

Implemented string parameter properties are:

PID	Description	Data type
1	Canonical data type	VT_I2
2	Current value	VT_BSTR
3	Quality	VT_I2
4	Timestamp	VT_DATE
5	Access rights	VT_I4
6	Server scan rate	VT_R4
7	EU type	VT_I4
8	Value texts	VT_EMPTY
101	Item description	VT_BSTR

Example location (<=> **OPC total Item ID**) in server configuration tree:

\Instruction\Other\Set mark\Mark text

4.4.6 Virtual output instructions feature

This feature may exist depending on the UNICORN instrument configuration. If the UNICORN instrument configuration contains virtual output instructions then they will be visible below `INSTRUCTION\VirtualOutput`. The following differs when comparing to other instructions:

- Virtual output instructions can be executed by an OPC client even though the client is not in control of the system.
 - Virtual output instructions are not visible in the UNICORN run log.
-

4.5 Method execution

About this section

A UNICORN method can be run via the **METHOD** branch.

The **METHOD** branch is dynamic. Whenever a new method is created or an existing method is modified, the **METHOD** branch has to be browsed again to see the changes and has to reconfigure the items to use. If a method is deleted, it is removed from the address space. Depending on the general server settings, different users are shown in the **METHOD** branch.

Each method file contains several items.

In this section

This section contains the following subsections:

Section	See page
4.5.1 Scout Run Index	43
4.5.2 Run Method	44
4.5.3 Result Name	46
4.5.4 Batch ID	48
4.5.5 StartNotes	49
4.5.6 MethodNotes	50
4.5.7 PreCompile	51
4.5.8 Questions	52
4.5.9 Variables	54

4.5.1 Scout Run Index

Introduction

Scout Run Index is used to include any scout runs. When a client writes 0, all scout runs will be included in the method run unless the excluded flag is set for any particular run. Entering any particular scout run number will include only that run in the method run. The canonical data type is **VT_I2** and the EU type is always **OPC_NOENUM**. Set the scan rate to the fastest update rate of the server (i.e., 500 ms).

The object is always **OPC_READABLE** and **OPC_WRITEABLE**. The object is writable only when in control of the system. Executing the method stores the text in the result.

Implemented properties

Implemented scout run index properties are:

PID	Description	Data type
1	Canonical data type	VT_I2
2	Current value	VT_I2
3	Quality	VT_I2
4	Timestamp	VT_DATE
5	Access rights	VT_I4
6	Server scan rate	VT_R4
102	Maximum value	VT_R8
103	Minimum value	VT_R8

Location (<=> **OPC total Item ID**) in server configuration tree:

\Method\DefaultHome\OPCSystem1 (Manual)\TestMethod1\Scout Run Index

4 UNICORN OPC Data Access address space

4.5 Method execution

4.5.2 Run Method

4.5.2 Run Method

Introduction

Available methods are read from the share directory of the current user, OPC user, or all users, depending on setup. The canonical data type is **VT_I2** and the EU type is always **OPC_ENUMERATED**. Set the scan rate to the fastest update rate of the server (i.e., 500 ms). Defined object values are:

Value	Description
0	Execute
1	Execute

The object is **OPC_READABLE** and **OPC_WRITEABLE**.

When a client writes **END (3)** to the state command, the current run state is checked to see if the result should be saved or not. If a method is running, the run state is **RUN (0)**, **PAUSE (1)** or **HOLD (2)** and the result is saved. Other run states imply that it is a manual run being executed and the result is saved in the [SystemName] (Manual) folder.

If a method is started when another method is already running, then the method will be placed the queue.

Quality is good when a method command is successfully issued. Writing the method run command stores the start notes, batch number, variables and questions before the method executes. The method will not start if a result name is not given.

Implemented properties

Implemented properties are:

PID	Description	Data type
1	Canonical data type	VT_I2
2	Current value	VT_EMPTY
3	Quality	VT_I2
4	Timestamp	VT_DATE
5	Access rights	VT_I4
6	Server scan rate	VT_R4
7	EU type	VT_I4

PID	Description	Data type
8	Value texts	<i>VT_ARRAY:VT_BSTR</i>
102	Maximum value	<i>VT_R8</i>
103	Minimum value	<i>VT_R8</i>

Location (<=> *OPC total Item ID*) in server configuration tree:

\Method\DefaultHome\OPCSys tem1 (Manual)\TestMethod1\Run Method

4 UNICORN OPC Data Access address space

4.5 Method execution

4.5.3 Result Name

4.5.3 Result Name

Introduction

The canonical data type is **VT_BSTR** and the EU type is always **OPC_NOENUM**. Set the scan rate to the fastest update rate of the server (i.e., 500 ms). Result name objects are both **OPC_READABLE** and **OPC_WRITABLE**, but only readable from **CACHE**. If a result name is set up in OPC, then UNICORN will not generate a result name. If not, then UNICORN will generate a unique result name when the method starts.

Note: *The methods can only be run if the module is in control of UNICORN system.*

Implemented properties

Implemented result name properties are:

PID	Description	Data type
1	Canonical data type	<i>VT_I2</i>
2	Current value	<i>VT_BSTR</i>
3	Quality	<i>VT_I2</i>
4	Timestamp	<i>VT_DATE</i>
5	Access rights	<i>VT_I4</i>
6	Server scan rate	<i>VT_R4</i>

Example location (<=> ***OPC total Item ID***) in server configuration tree:

\Method\DefaultHome\OPCSysItem1 (Manual)\TestMethod1\Result Name

4 UNICORN OPC Data Access address space

4.5 Method execution

4.5.4 Batch ID

4.5.4 Batch ID

Introduction

Batch ID is used to set the batch number before running a method. The canonical data type is **VT_BSTR** and the EU type is always **OPC_NOENUM**.

Set the scan rate to the fastest update rate of the server (i.e., 500 ms).

Batch ID objects are both **OPC_READABLE** and **OPC_WRITABLE**, but only readable from **CACHE**. Clients write the batch number to the object. If a batch ID is set up in OPC, then UNICORN will not generate a batch ID. If a batch ID is not setup in OPC, then UNICORN will generate a unique batch ID when the method starts.

Note: *The methods can only be run if the module is in control of UNICORN system.*

Implemented properties

Implemented batch ID properties are:

PID	Description	Data type
1	Canonical data type	VT_I2
2	Current value	VT_BSTR
3	Quality	VT_I2
4	Timestamp	VT_DATE
5	Access rights	VT_I4
6	Server scan rate	VT_R4

Example location (<=> **OPC total Item ID**) in server configuration tree:

\Method\DefaultHome\OPCSysItem1 (Manual)\TestMethod1\Batch_ID

4.5.5 StartNotes

Introduction

StartNotes is used to read and write the start notes. The canonical data type is **VT_BSTR** and the EU type is always **OPC_NOENUM**.

Set the scan rate to the fastest update rate of the server (i.e., 500 ms).

StartNotes objects are **OPC_READABLE** and **OPC_WRITEABLE**. The object is writable only when in control of the system. Executing the method stores the text in the result.

Implemented properties

Implemented start notes properties are:

PID	Description	Data type
1	Canonical data type	VT_I2
2	Current value	VT_BSTR
3	Quality	VT_I2
4	Timestamp	VT_DATE
5	Access rights	VT_I4
6	Server scan rate	VT_R4

Example location (<=> **OPC total Item ID**) in server configuration tree:

\Method\DefaultHome\OPCSysstem1 (Manual)\TestMethod1\Start Notes

4 UNICORN OPC Data Access address space

4.5 Method execution

4.5.6 MethodNotes

4.5.6 MethodNotes

Introduction

MethodNotes is used to read the method notes. The canonical data type is **VT_BSTR** and the EU type is always **OPC_NOENUM**.

Set the scan rate to the fastest update rate of the server (i.e., 500 ms).

MethodNotes objects are **OPC_READABLE**.

Implemented properties

Implemented method notes properties are:

PID	Description	Data type
1	Canonical data type	VT_I2
2	Current value	VT_BSTR
3	Quality	VT_I2
4	Timestamp	VT_DATE
5	Access rights	VT_I4
6	Server scan rate	VT_R4

Example location (<=> **OPC total Item ID**) in server configuration tree:

\Method\DefaultHome\OPCSysItem1 (Manual)\TestMethod1\Method Notes

4.5.7 PreCompile

Introduction

The canonical data type is always **VT_BSTR** (text string value). The EU type is always **OPC_NOENUM**. Set the scan rate to the fastest update rate of the server (i.e., 500 ms).

This forces UNICORN OPC to compile the method and check if it is runnable on this system. If it is, the result will be an xml string containing "Succeed" as the status. If not, the string will contain an error text.

Implemented properties

Implemented method compile properties are:

PID	Description	Data type
1	Canonical data type	VT_I2
2	current value	VT_BSTR
3	Quality	VT_I2
4	Timestamp	ST_DATE
5	Access rights	VT_I4
6	Server scan rate	VT_R4

Example location (<=> **OPC total Item ID**) in server configuration tree:

```
\Method\DefaultHome\OPCSys tem1 (Manual)\TestMethod1\PreCompile  
Method
```

4 UNICORN OPC Data Access address space

4.5 Method execution

4.5.8 Questions

4.5.8 Questions

Introduction

The **QUESTIONS** branch is used to read and write the start protocol questions. One object is created for each question in a start protocol. Objects are added to the **QUESTIONS** branch for every method. The canonical data type is either **VT_BSTR** or **VT_UI4**, depending on the question type:

Question types and data types

Data type	Question type
<i>NoReply</i>	VT_BSTR, OPC_NOENUM
<i>Entry field</i>	VT_BSTR, OPC_NOENUM
<i>Multiple choice</i>	VT_UI4, OPC_ENUMERATED as VT_ARRAY VT_BSTR
<i>Integer</i>	VT_BSTR, OPC_NOENUM
<i>Float</i>	VT_BSTR, OPC_NOENUM

Integer and **Float** may have minimum and maximum ranges. Writing out of range is not allowed. Empty strings are valid unless the mandatory flag is set. Authorized questions are allowed without supplying any signature. Also, it is possible to run methods without answering all the questions unless the mandatory flag is set.

Set the scan rate to the fastest update rate of the server (i.e., 500 ms).

Question objects are **OPC_READABLE** and **OPC_WRITEABLE**. The object is writable only when in control of the system. Executing the method stores the answers in the result.

Implemented properties

Implemented properties are:

PID	Description	Data type
1	Canonical data type	VT_I2
2	Current value	VT_BSTR or VT_UI4
3	Quality	VT_I2
4	Timestamp	VT_DATE
5	Access rights	VT_I4

PID	Description	Data type
6	Server scan rate	<i>VT_R4</i>
7	EU type	<i>VT_I4</i>
8	Value texts	<i>VT_ARRAY:VT_BSTR</i>
102	Maximum value	<i>VT_R8</i> (if <i>Float</i> , <i>Integer</i> or <i>Multiple</i>)
103	Minimum value	<i>VT_R8</i> (if <i>Float</i> , <i>Integer</i> or <i>Multiple</i>)

Example location (<=> *OPC total Item ID*) in server configuration tree:

```
\Method\DefaultHome\ OPCSystem1(Manual)\TestMethod1\Question(s)\Question1{Mandatory}
```

4 UNICORN OPC Data Access address space

4.5 Method execution

4.5.9 Variables

4.5.9 Variables

Introduction

The **VARIABLES** branch is used to read and write the method variables. One object is created for each method variable. Objects are added to the **VARIABLES** branch for every method if the **StartProtocol** for the method supports the variable value change. The variables on the following are not supported:

- Scouting
- Instruction breakpoint
- Frac-950 Fractionation instruction parameters
- Frac-950 Peak Fractionation parameters

Data types and variable types

The canonical data type depends on the variable type:

Data type	Variable type
<i>Float</i>	<i>VT_R4, OPC_NOENUM</i>
<i>Integer</i>	<i>VT_I4, OPC_NOENUM</i>
<i>String</i>	<i>VT_BSTR, OPC_NOENUMR</i>
<i>Multiple choice</i>	<i>VT_I4, OPC_ENUMERATED as VT_ARRAY VT_BSTR</i>

Integer and **Float** have minimum and maximum ranges. Writing out of range is not allowed.

Set the scan rate to the fastest update rate of the server (i.e., 500 ms).

Variables objects are **OPC_READABLE** and **OPC_WRITEABLE**. The object is writable only when in control of the system. Executing the method uses the variable settings during method run.

Implemented properties

Implemented start protocol variables general properties are:

PID	Description	Data type
1	Canonical data type	<i>VT_I2</i>
2	Current value	<i>VT_R4, VT_I4, BSTR or VT_UI4</i>
3	Quality	<i>VT_I2</i>

PID	Description	Data type
4	Timestamp	<i>VT_DATE</i>
5	Access rights	<i>VT_I4</i>
6	Server scan rate	<i>VT_R4</i>

Properties of start protocol variables specific variables

Float, *Integer* or *Multiple choice* also implements the following properties:

PID	Description	Data type
7	EU type	<i>VT_I4</i>
8	Value texts	<i>VT_ARRAY:VT_BSTR</i>
100	Unit	<i>VT_BSTR</i>
101	Description	<i>VT_BSTR</i>
102	Maximum value	<i>VT_R8</i>
103	Minimum value	<i>VT_R8</i>
5000	Default value	<i>VT_R4</i> , <i>VT_I4</i> , <i>VT_BSTR</i> or <i>VT_UI4</i>

Example location (<=> *OPC total Item ID*) in server configuration tree:

```
\Method\DefaultHome\OPCSysTem1 (Manual)\TestMethod1\Method Variable(s)\Inlet B
```

4.6 State

About this section

The **STATE** branch contains important state information for the system.

In this section

This section contains the following subsections:

Section	See page
4.6.1 AssignState	57
4.6.2 RunState	59
4.6.3 Command	61
4.6.4 InstrumentConnection	63
4.6.5 InstrumentStatusConnection	64

4.6.1 AssignState

Introduction

AssignState enables the client to change assign mode to UNICORN system. Default assign mode is **View**, a mode where the client can monitor **EVENT** and **STATE** branch items. By changing mode to **Control**, it is also possible to execute instructions, run methods and save system settings. The canonical data type is **VT_I4** and the EU type is always **OPC_ENUMERATED**. Set the scan rate to the fastest update rate of the server (i.e., 500 ms).

Object values

Defined assign state values are:

Value	State
0	View
1	Control

Quality is good if a correct **AssignState** is written to the object, otherwise bad.

Implemented properties

Implemented assign state properties are:

PID	Description	Data type
1	Canonical data type	VT_I2
2	Current value	VT_I4
3	Quality	VT_I2
4	Timestamp	VT_DATE
5	Access rights	VT_I4
6	Server scan rate	VT_R4
7	EU type	VT_I4
8	Value texts	VT_ARRAY:VT_BSTR
102	Maximum value	VT_R8

4 UNICORN OPC Data Access address space

4.6 State

4.6.1 AssignState

PID	Description	Data type
103	Minimum value	VT_R8

Example location (<=> **OPC total Item ID**) in server configuration tree:

\STATE\AssignState

4.6.2 RunState

Object values

The canonical data type is ***VT_I2*** and the EU type is always ***VT_I4***. Set the scan rate to the fastest update rate of the server (i.e., 500 ms). Defined object values are:

Value	State
0	<i>Ready</i>
1	<i>Method Run</i>
2	<i>Manual Run</i>
3	<i>System Pause</i>
4	<i>System Pause</i>
5	<i>Hold</i>
6	<i>Pause Hold</i>
7	<i>Hold Pause</i>
8	<i>Manual Pause</i>
10	<i>Wash</i>
12	<i>Alarms and errors</i>
13	<i>Initializing system</i>
128	<i>Resetting</i>
129	<i>Starting method run</i>
130	<i>Starting manual run</i>

Quality is good on successful request of run state data or on valid update from online data, otherwise bad.

Implemented properties

Implemented run state properties are:

PID	Description	Data type
1	Canonical data type	<i>VT_I2</i>

4 UNICORN OPC Data Access address space

4.6 State

4.6.2 RunState

PID	Description	Data type
2	Current value	<i>VT_I4</i>
3	Quality	<i>VT_I2</i>
4	Timestamp	<i>VT_DATE</i>
5	Access rights	<i>VT_I4</i>
6	Server scan rate	<i>VT_R4</i>
7	EU type	<i>VT_I4</i>
8	Value texts	<i>VT_EMPTY</i>
102	Maximum value	<i>VT_R8</i>
103	Minimum value	<i>VT_R8</i>

Example location (<=> **OPC total Item ID**) in server configuration tree:

\STATE\RunState

4.6.3 Command

Object values

The canonical data type is ***VT_I2*** and the EU type is always ***OPC_ENUMERATED***. Set the scan rate to the fastest update rate of the server (i.e., 500 ms). Defined object values are:

Value	State
0	<i>Pause</i>
1	<i>Hold</i>
2	<i>Continue</i>
3	<i>End</i>
4	<i>Next breakpoint</i>

Method command objects are ***OPC_WRITABLE***. Writing a valid value causes the utility object to submit a manual command.

Note: Methods can only be run if the module is in control of UNICORN system.

When a client writes ***END (3)***, the current run state is checked to see if the result should be saved or not. If a method is running, the run state is ***RUN (1)***, ***PAUSE (4)*** or ***HOLD (5)*** and the result is saved. Other run state values imply a manual instruction being executed and the result is created in the **[SystemName] (Manual)** folder.

Quality is good when a method (manual) command is successfully issued.

Implemented properties

Implemented general command properties are:

PID	Description	Data type
1	Canonical data type	<i>VT_I2</i>
2	Current value	<i>VT_I2</i>
3	Quality	<i>VT_I2</i>
4	Timestamp	<i>VT_DATE</i>
5	Access rights	<i>VT_I4</i>
6	Server scan rate	<i>VT_R4</i>
7	EU type	<i>VT_I4</i>

4 UNICORN OPC Data Access address space

4.6 State

4.6.3 Command

PID	Description	Data type
8	Value texts	<i>VT_ARRAY:VT_BSTR</i>
102	Maximum value	<i>VT_R8</i>
103	Minimum value	<i>VT_R8</i>

Example location (<=> *OPC total Item ID*) in server configuration tree:

\STATE\Command

4.6.4 InstrumentConnection

Object value

InstrumentConnection handles the instrument connection state. The canonical data type is **VT_I4**. Set the scan rate to the fastest update rate of the server (i.e., 500 ms). Defined object values are:

Value	State
0	<i>Ready</i>
1	<i>Scanning</i>
2	<i>Unknown</i>

InstrumentConnection objects are **OPC_READABLE**.

Note: The instrument connection must be valid (connected) for the other items to work as expected.

Implemented properties

Implemented instrument connection properties are:

PID	Description	Data type
1	Canonical data type	VT_I2
2	Current value	VT_I4
3	Quality	VT_I2
4	Timestamp	VT_DATE
5	Access rights	VT_I4
6	Server scan rate	VT_R4
7	EU type	VT_I4
8	Value texts	VT_ARRAY:VT_BSTR
102	Maximum value	VT_R8
103	Minimum value	VT_R8

Example location (<=> **OPC total Item ID**) in server configuration tree:

\STATE\InstrumentConnection

4 UNICORN OPC Data Access address space

4.6 State

4.6.5 InstrumentStatusConnection

4.6.5 InstrumentStatusConnection

Object values

InstrumentStatusConnection handles the instrument status state. The canonical data type is **VT_I2**. Set the scan rate to the fastest update rate of the server (i.e., 500 ms). Defined object values are:

Value	Connection
0	Yes
1	Partially
2	No

InstrumentStatus objects are **OPC_READABLE**.

Note: The instrument status must be valid (ready) if the other items are to work as expected.

Implemented properties

Implemented instrument status properties are:

PID	Description	Data type
1	Canonical data type	<i>VT_I2</i>
2	Current value	<i>VT_I4</i>
3	Quality	<i>VT_I2</i>
4	Timestamp	<i>VT_DATE</i>
5	Access rights	<i>VT_I4</i>
6	Server scan rate	<i>VT_R4</i>
7	EU type	<i>VT_I4</i>
8	Value texts	<i>VT_ARRAY:VT_BSTR</i>
102	Maximum value	<i>VT_R8</i>
103	Minimum value	<i>VT_R8</i>

Example location (\Rightarrow OPC total Item ID) in server configuration tree:

\STATE\InstrumentStatusConnection

4.7 Recommendations

Write to items

It is recommended to write to items synchronously. The server handles both synchronous and asynchronous writes but when making asynchronous writes it is up to the client to wait until the server is ready with previous asynchronous write.

All items whose names ends with **_EXECUTE** are used as “batch” commands to execute methods and instructions with parameters and system settings. Before writing to the **_EXECUTE** item, the items, which are included in the “batch” (e.g., instruction parameters) have to be written. A recommendation is to add a delay before writing to the **_EXECUTE** items since when using a mirroring client between two OPC servers it has been seen that item writes might arrive to the UNICORN OPC server in an incorrect order.

Note: UNICORN system settings are available via the **SETTINGS** branch, which works like the **INSTRUCTION** branch with one exception. There is only one execute instruction, `\Setting\Store`, to store all system settings at once.

System settings can only be saved when the system is in **Ready** state. If UNICORN changes system settings, it updates the settings parameters in OPC.

5 UNICORN OPC Alarms & Events address space

About this chapter

This chapter describes UNICORN OPC Alarms & Events address space, various types of alarms, run log, error messages and event categories.

In this chapter

This chapter contains the following sections:

Section	See page
5.1 Introduction	68
5.2 Alarms and errors	69
5.3 Event categories	71

5 UNICORN OPC Alarms & Events address space

5.1 Introduction

5.1 Introduction

The Alarms & Events address space shows the internal alarm functionality of the instrument configuration. Each item in the address space might trigger an alarm or event.

Each component's failure/loss triggers an alarm and the AE client connected in control/view of the system is notified. If the connection to the instrument is lost, then AE client is notified through the restart error alarm. Once the restart error occurs and when the connection issue has been fixed thereafter, then either the UNICORN Instrument Server computer has to be restarted or the restart error has to be acknowledged in UNICORN **System Control**.

In order to acknowledge alarms or warnings from the OPC client, the client (UNICORN OPC server) has to be in control of the system. To take control, use the **Data Access** server in parallel and take control over the system via the **AssignState** item. It is also possible to use the **TakeControl** option.

The UNICORN OPC AE server does not support the inactive/acknowledged/enabled state. UNICORN OPC AE server will not be able to notify that the alarm or warning becomes inactive. It only notifies if the signal reaches an alarm or warning state, but it will not notify the opposite when reaching the normal state.

Alarms & Events address space view



Tip: The address space depends on the instrument configuration. Different items will appear depending on which instrument configuration is used.

5.2 Alarms and errors

Analog alarm

There are always four conditions for analog alarm objects (sources). Corresponding condition names are:

- 1 ***LO_ALARM***
- 2 ***LO_WARNING***
- 3 ***HI_ALARM***
- 4 ***HI_WARNING***

Both **Condition Events** and **Tracking Events** can be generated. **Condition Events** are generated when a condition becomes active or inactive and when a condition is acknowledged. **Tracking Events** are generated when a condition is disabled but still active or inactive and unacknowledged. The event categories are **Level** for **Condition Events** and **Enable/Disable** for **Tracking Events**. No attributes are supported for analog alarms.

No attributes are supported for analog alarms.

Example location (<=> **OPC qualified source name**) in server area space:

Analog alarms.Cond2

Digital alarm

There is only one condition for each digital alarm object (source). The condition names for the two different types are:

- 1 ***WARNING***
- 2 ***ALARM***

Both **Condition Events** and **Tracking Events** can be generated. **Condition Events** are generated when a condition becomes active or inactive and when a condition is acknowledged. **Tracking Events** are generated when a condition is disabled but still active or inactive and unacknowledged. Event categories are **DiscreteW** or **DiscreteA** for **Condition Events** and **Enable/Disable** for **Tracking Events**. No attributes are supported for digital alarms.

Example location (<=> **OPC qualified source name**) in server area space:

Digital alarms.FlowWarning

5 UNICORN OPC Alarms & Events address space

5.2 Alarms and errors

Errors

This is the error dialog box in UNICORN **System Control**. The event category of the simple error event is **Run Log**. The event category of the condition error event is **Errors**.


No attributes are defined for error events and no acknowledgements are required for this event type.

Location (<=> **OPC qualified source name**) in server area space:

Other.Errors

5.3 Event categories

Alarms & Events address space view

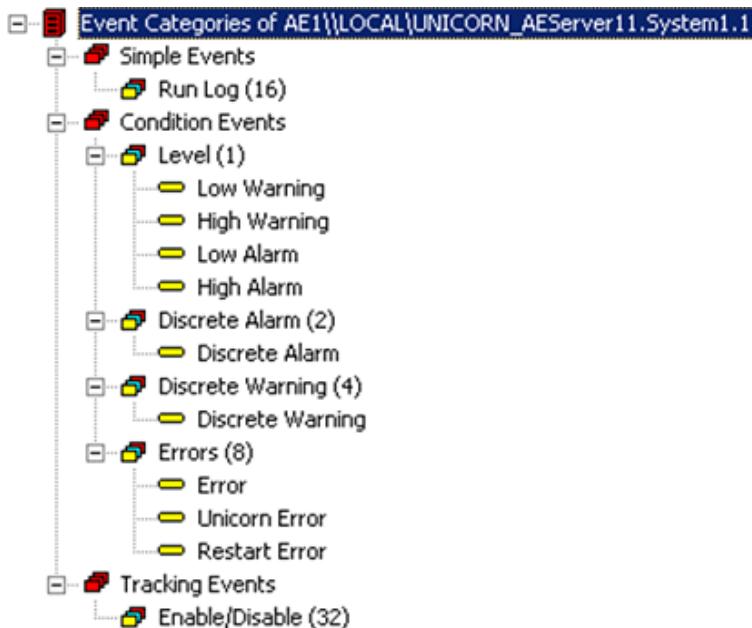

Event categories for UNICORN OPC server

Event categories for UNICORN OPC server are defined as:

UNICORN Alarm & Event	Event types	Event categories
<i>Analog Alarm</i>	<i>OPC_CONDITION_EVENT</i>	<i>Level</i> (ID=1)
	<i>OPC_TRACKING_EVENT</i>	<i>Enable/Disable</i> (ID=32)
<i>Digital Alarm</i>	<i>OPC_CONDITION_EVENT</i>	<i>Discrete Alarm</i> (ID=2) or
	<i>OPC_TRACKING_EVENT</i>	<i>Discrete Warning</i> (ID=4)
<i>Error</i>	<i>OPC_SIMPLE_EVENT</i>	<i>Run Log</i> (ID=16)
	<i>OPC_CONDITION_EVENT</i>	<i>Errors</i> (ID=8)

6 UNICORN OPC Historical Data Access address space

About this chapter

This chapter provides information about UNICORN OPC Historical Data Access (HDA) address space, audit trail, HDA XML format definition etc.

In this chapter

This chapter contains the following sections:

Section	See page
6.1 Introduction	73
6.2 AuditTrail	76
6.3 Result file information	77
6.4 UNICORN OPC HDA XML format definition	86

6.1 Introduction

The HDA address space is dynamic. A result file can be browsed whenever a new result is created. If a result is deleted, it is removed from the address space.

Tip: *The address space depends on the result files that have been created based on a specific instrument configuration. Different items will appear in the result file depending on the instrument configuration used when the result file was created.*


Configuration and settings

UNICORN HDA Service supports manual activation by default. The UNICORN HDA Service settings have to be altered to get it to start automatically. The setting can be changed through the Services-utility (Run : services.msc to start it).

To start automatically, change **Startup Type** through **UNICORN HDA Service Properties** window.


6 UNICORN OPC Historical Data Access address space

6.1 Introduction

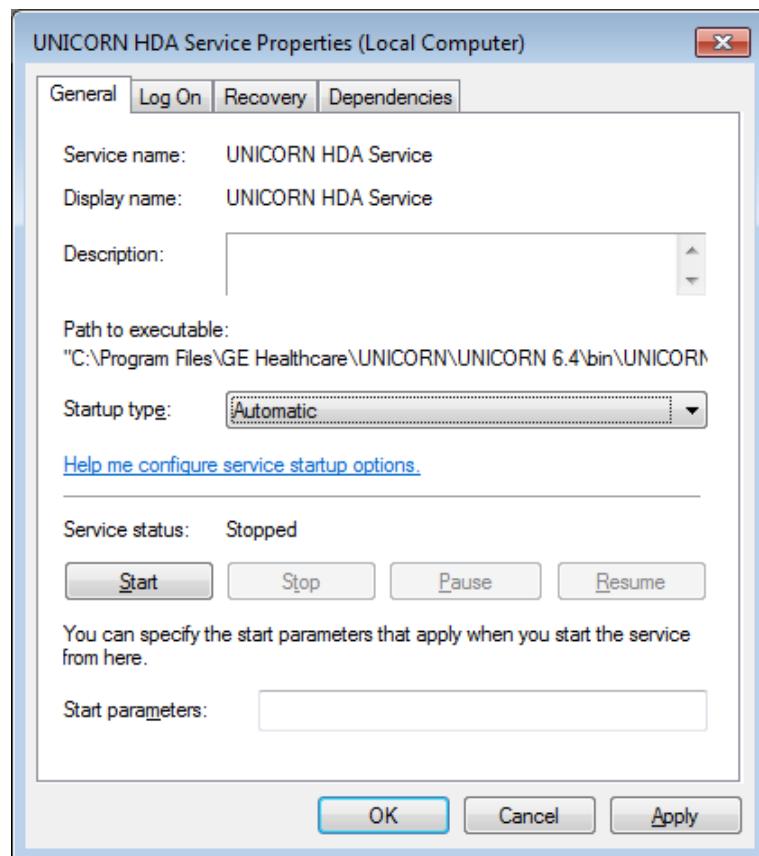

The HDA address space is dynamic. A result file can be browsed whenever a new result is created. If a result is deleted, it is removed from the address space. The UNICORN HDA server only supports one OPC client connection and it requires that no UNICORN client is running on same PC.

HDA address space view

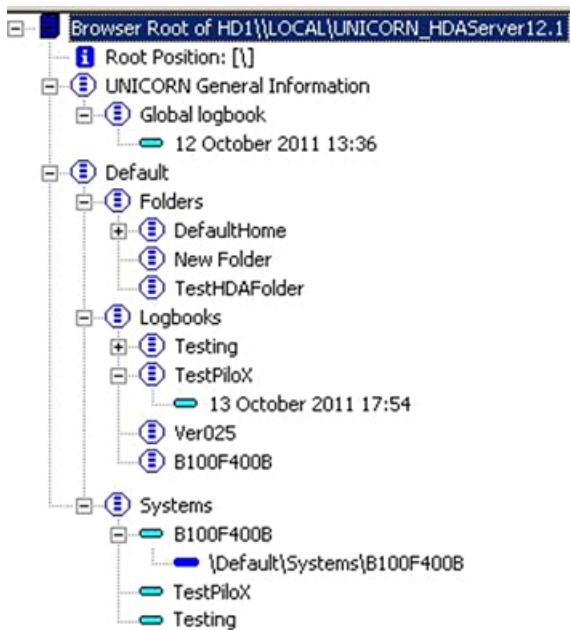

Tip: The address space depends on the result files that has been created based on a specific instrument configuration. Different items will appear in the result file depending on which instrument configuration that was used when the result file was created.

6 UNICORN OPC Historical Data Access address space

6.2 AuditTrail

6.2 AuditTrail

Introduction

AuditTrail from UNICORN are available under the HDA server address space. The global logbook is found under the **UNICORN GENERAL INFORMATION** branch and the system specific logs are found under the **Logbooks** folder in the user (for example **Default**) folder.

Attributes defined by AuditTrail

Each **AuditTrail** leaf (item) has the following attributes defined:

Name	Description	Data type
<i>Datatype</i>	Item data type	<i>VT_UI4</i>
<i>ItemId</i>	Item ID	<i>VT_BSTR</i>
<i>StartLowFileTime</i>	Start time low <i>FILETIME</i>	<i>VT_UI4</i>
<i>StartHighFileTime</i>	Start time high <i>FILETIME</i>	<i>VT_UI4</i>
<i>EndLowFileTime</i>	End time low <i>FILETIME</i>	<i>VT_UI4</i>
<i>EndHighFileTime</i>	End time high <i>FILETIME</i>	<i>VT_UI4</i>

Start and end time are equal for a leaf. Time is set to the creation time of the audit trail file, i.e., the renew time.

6.3 Result file information

About this section

Each result file contains **Curves**, **Documentation** and **Peak tables**.

Information about the system is available under the **Systems** folder in the user folder.

In this section

This section contains the following subsections:

Section	See page
6.3.1 Curves	78
6.3.2 Documentation	81
6.3.3 Peak tables	84
6.3.4 Systems	85

6 UNICORN OPC Historical Data Access address space

6.3 Result file information

6.3.1 Curves

6.3.1 Curves

Introduction

All curves in a result file are listed as items directly under the result file branch in the address space.

Attributes supported by Curves

Each curve has a number of supported attributes that allow the kind of curve, the item represents to be identified:

Name	Description	Data type
<i>Datatype</i>	Item data type	<i>VT_UI4</i>
<i>EngUnits</i>	Unit	<i>VT_BSTR</i>
<i>NormalMaximum</i>	Maximum value	<i>VT_R8</i>
<i>NormalMinimum</i>	Minimum value	<i>VT_R8</i>
<i>Itemid</i>	Item ID	<i>VT_BSTR</i>
<i>CurveType</i>	Curve type	<i>VT_I2</i>
<i>StartLowFileTime</i>	Start time low <i>FILETIME</i>	<i>VT_UI4</i>
<i>StartHighFileTime</i>	Start time high <i>FILETIME</i>	<i>VT_UI4</i>
<i>EndLowFileTime</i>	End time low <i>FILETIME</i>	<i>VT_UI4</i>
<i>EndHighFileTime</i>	End time high <i>FILETIME</i>	<i>VT_UI4</i>
<i>ZeroLowFileTime</i>	Zero time low <i>FILETIME</i>	<i>VT_UI4</i>
<i>ZeroHighFileTime</i>	Zero time high <i>FILETIME</i>	<i>VT_UI4</i>
<i>TimeInt</i>	Sample time interval in sec	<i>VT_R8</i>
<i>FirstInjectionLowFileTime</i>	First injection time low <i>FILETIME</i>	<i>VT_UI4</i>
<i>FirstInjectionhighFileTime</i>	First injection time high <i>FILETIME</i>	<i>VT_UI4</i>
<i>ChromStartLowFileTime</i>	Chrom start time low <i>FILETIME</i>	<i>VT_UI4</i>
<i>ChromStartHighFileTime</i>	Chrom start time high <i>FILETIME</i>	<i>VT_UI4</i>
<i>UnicornRawData</i>	UNICORN raw curve data	<i>VT_BSTR</i>

Types of Curves

There are several types of curves (*HDA_CURVE_TYPE*):

Curve type	Data type
<i>HDA_CURVETYPE_GENERIC_RAW</i>	Array of <i>VT_R8</i>
<i>HDA_CURVETYPE_GENERIC_EVALUATED</i>	Array of <i>VT_R8</i>
<i>HDA_CURVETYPE_FRACMARKS_RAW</i>	Array of <i>VT_BSTR</i>
<i>HDA_CURVETYPE_FRACMARKS_EVALUATED</i>	Array of <i>VT_BSTR</i>
<i>HDA_CURVETYPE_INJECTIONMARKS_RAW</i>	Array of <i>VT_BSTR</i>
<i>HDA_CURVETYPE_INJECTIONMARKS_EVALUATED</i>	Array of <i>VT_BSTR</i>
<i>HDA_CURVETYPE_SETMARKS_RAW</i>	Array of <i>VT_BSTR</i>
<i>HDA_CURVETYPE_SETMARKS_EVALUATED</i>	Array of <i>VT_BSTR</i>

Curve types bit mask

In addition to curve type, a bit mask is added to the type:

Curve type bit mask	Description
<i>HDA_CURVETYPE_TIMedefined</i>	Curve data exist as time axis
<i>HDA_CURVETYPE_VOLUMEDEFINED</i>	Curve data exist as volume axis
<i>HDA_CURVETYPE_MARKERDEFINED</i>	Curve data exists as text (both time and volume axes)

The first injection time and chrom start time might not always be defined for a curve. The start time is not the absolute time when the curve was created. Instead, the result file creation time is used as a base. The real absolute time for a curve is read from chrom start time. The difference is usually around 10 to 15 seconds.

Note: *chrom time is only defined on RAW curve types.*

Zero time defines the time of zero. The curve can start at any time before and after zero time. It can even end before zero time. Applying zero time to a curve allows zero to be located on the x-axis.

The result file might contain curves only stored in volume base. These curves cannot be read and will fail *ReadRaw/ReadProcessed*, since the HDA specification only allows time as x-axis. However, the volume curves are available via the *HDA_UNICORN_RAW_DATA* attribute. This attribute returns all curve data (both time and volume) as an XML-formatted string.

6 UNICORN OPC Historical Data Access address space

6.3 Result file information

6.3.1 Curves

The low and high attributes are mapped to the *dwLowDateTime* and *dwHighDateTime* members of the **FILETIME** structure to enable **FILETIME** accuracy on the client side.

6.3.2 Documentation

Introduction

Evaluation in UNICORN has a documentation dialog for each result file. The **DOCUMENTATION** branch for each result file in HDA contains the same data as **Evaluation** in documentation.

Items in Documentation

The following items are available:

Item	Data type
<i>BatchNumber</i>	<i>String</i>
<i>BufferPro</i>	<i>XML string</i>
<i>Calibration</i>	<i>XML string</i>
<i>Columns</i>	<i>XML string</i>
<i>Evaluation logbook</i>	<i>XML string</i>
<i>Evaluation procedures</i>	<i>XML string</i>
<i>FracXY</i>	<i>XML string</i>
<i>Run logbook</i>	<i>XML string</i>
<i>Method name</i>	<i>String</i>
<i>Method creator</i>	<i>String</i>
<i>Method creation date</i>	<i>DateTime</i>
<i>Method created for system</i>	<i>String</i>
<i>Method last modifier</i>	<i>String</i>
<i>Method last modification date</i>	<i>DateTime</i>
<i>Method signatures</i>	<i>XML string</i>
<i>Method notes</i>	<i>XML string</i>
<i>Start notes</i>	<i>XML string</i>
<i>Run notes</i>	<i>XML string</i>

6 UNICORN OPC Historical Data Access address space

6.3 Result file information

6.3.2 Documentation

Item	Data type
<i>Evaluation notes</i>	<i>XML string</i>
<i>Method strategy notes</i>	<i>String</i>
<i>Result name</i>	<i>String</i>
<i>Result creator</i>	<i>String</i>
<i>Result creation date</i>	<i>DateTime</i>
<i>Result run system</i>	<i>String</i>
<i>Batch number</i>	<i>String</i>
<i>Result signatures</i>	<i>XML string</i>
<i>Result strategy used components</i>	<i>XML string</i>
<i>Scouting</i>	<i>XML string</i>
<i>System Settings</i>	<i>XML string</i>
<i>Snapshot</i>	<i>XML string</i>
<i>Text Instructions</i>	<i>XML string</i>
<i>Variables</i>	<i>XML string</i>
<i>Method Instrument Configuration</i>	<i>XML string</i>
<i>Result Instrument Configuration</i>	<i>XML string</i>
<i>Questions</i>	<i>XML string</i>

Attributes in Documentation

Each documentation item defines the following attributes:

Attribute	Description	Data type
<i>DataType</i>	Item data type	<i>VT_UI4</i>
<i>Itemid</i>	Item ID	<i>VT_BSTR</i>
<i>StartLowFileTime</i>	Start time low <i>FILETIME</i>	<i>VT_UI4</i>
<i>StartHighFileTime</i>	Start time high <i>FILETIME</i>	<i>VT_UI4</i>

Attribute	Description	Data type
<i>EndLowFileTime</i>	End time low <i>FILETIME</i>	<i>VT_UI4</i>
<i>EndHighFileTime</i>	End time high <i>FILETIME</i>	<i>VT_UI4</i>

Start and end times are equal in the **DOCUMENTATION** branch. To get data from **Read-Raw**, this time stamp must be included in the time range, otherwise no data will be returned.

6 UNICORN OPC Historical Data Access address space

6.3 Result file information

6.3.3 Peak tables

6.3.3 Peak tables

Introduction

The **PEAK TABLES** branch contains all peak tables stored in the result file. When reading from the item, the peak table is returned as an XML-formatted string.

Items in Peak Tables

Each item defines the following attributes:

Attribute	Description	Data type
<i>Datatype</i>	Item data type	<i>VT_UI4</i>
<i>Itemid</i>	Item ID	<i>VT_BSTR</i>
<i>StartLowFileTime</i>	Start time low <i>FILETIME</i>	<i>VT_UI4</i>
<i>StartHighFileTime</i>	Start time high <i>FILETIME</i>	<i>VT_UI4</i>
<i>EndLowFileTime</i>	End time low <i>FILETIME</i>	<i>VT_UI4</i>
<i>EndHighFileTime</i>	End time high <i>FILETIME</i>	<i>VT_UI4</i>

6.3.4 Systems

Introduction

Information about the system is available under the **Systems** folder in the user folder.

Items in Systems

Each system leaf defines the following attributes:

Attribute	Description	Data type
<i>Datatype</i>	Item data type	<i>VT_UI4</i>
<i>StartLowFileTime</i>	Start time low <i>FILETIME</i>	<i>VT_UI4</i>
<i>StartHighFileTime</i>	Start time high <i>FILETIME</i>	<i>VT_UI4</i>
<i>EndLowFileTime</i>	End time low <i>FILETIME</i>	<i>VT_UI4</i>
<i>EndHighFileTime</i>	End time high <i>FILETIME</i>	<i>VT_UI4</i>
<i>ItemId</i>	Item ID	<i>VT_BSTR</i>

6 UNICORN OPC Historical Data Access address space

6.4 UNICORN OPC HDA XML format definition

6.4 UNICORN OPC HDA XML format definition

About this section

The XML format is defined for each result file item. This section describes the different XML structures.

In this section

This section contains the following subsections:

Section	See page
6.4.1 BufferPro, v 1.0	88
6.4.2 Calibration, v 1.0	89
6.4.3 EvaluationLog, v 1.0	90
6.4.4 Run logbook, v 1.1	91
6.4.5 SignatureList, v 1.0	92
6.4.6 SnapshotList, v 1.0	93
6.4.7 UsedComponents, v 1.0	94
6.4.8 Notes, v 1.0	95
6.4.9 ScoutingList, v 1.1	96
6.4.10 SettingsList, v 1.0	97
6.4.11 TextInstructions, v 1.0	98
6.4.12 VariableList, v 1.1	99
6.4.13 QuestionList, v 1.0	100
6.4.14 PeakTable, v 1.1	101
6.4.15 Unicorn raw, v 1.0	104
6.4.16 Columns, v 1.1	106

Section	See page
6.4.17 EvaluationProcedures, v1.0	108
6.4.18 FracXY, v 1.0	109
6.4.19 AuditTrail, v 1.1	110
6.4.20 Method/Result Instrument Configuration, v 1.0	111
6.4.21 System	112

6 UNICORN OPC Historical Data Access address space

6.4 UNICORN OPC HDA XML format definition

6.4.1 BufferPro, v 1.0

6.4.1.1 BufferPro, v 1.0

This XML structure is exported by reading the **BufferPro** leaf.

Note: For migrated UNICORN 5.x results, the **BufferPro** OPC item contains **BufferPrep** data. Both the S function and the S function share the same storage format.

BufferPro XML structure

Tag name	Description
BufferPro	Root item
RecipeName	Recipe name
pHRange	pH range, separated with “-”
B100	100% buffer B
AcidOrBase	Acid or base name
Salt	Salt name and salt stock concentration
Notes	Recipe name
Buffer	Specifications of the different buffers
Name	Buffer name
pKa1	pK _a 1
pKa2	pK _a 2
pKa3	pK _a 3
dpKa1dt	d _p K _a 1 delta
dpKa2dt	d _p K _a 2 delta
dpKa3dt	d _p K _a 3 delta
AcidicProtons	Number of acidic protons
ChargeDeprotonatedIon	Number of charge deprotonated ions
SaltName	Salt name
ChargeAnion	Number of charged anions
ChargeCation	Number of charged cations

6.4.2 Calibration, v 1.0

This XML structure is exported by reading the **Calibration** leaf.

Calibration XML structure

Tag name	Description
CalibrationList	Root item
Calibration	A calibration
TagName	Name of item that has been calibrated
Date	Date
Username	User name
Point1	Point 1
Point2	Point 2
Constant	Constant
Offset	Offset
Remote	Calibration local or remote. (YES/NO)
P	Proportional control component
I	Integral control component
D	Derivative control component
ReferenceValue1	Reference value 1
ReferenceValue2	Reference value 2
CalibrationConstantDescription1	Calibration constant description 1
CalibrationConstantValue1	Calibration constant value 1
CalibrationConstantDescription2	Calibration constant description 2
CalibrationConstantValue2	Calibration constant value 2
CalibrationConstantDescription3	Calibration constant description 3
CalibrationConstantValue3	Calibration constant value 3

6 UNICORN OPC Historical Data Access address space

6.4 UNICORN OPC HDA XML format definition

6.4.3 EvaluationLog, v 1.0

6.4.3 EvaluationLog, v 1.0

This XML structure is exported by reading the ***Evaluation logbook*** leaf.

EvaluationLog XML structure

Tag name	Description
<i>EvaluationLog</i>	Root item.
<i>Item</i>	Item containing evaluation logbook event.

6.4.4 Run logbook, v 1.1

This XML structure is exported by reading the ***Run logbook*** leaf.

Logbook XML structure

Tag name	Description
<i>Logbook</i>	Root item
<i>Item</i>	A logbook item
<i>AccumulatedTime</i>	Accumulated time in seconds
<i>AccumulatedVolume</i>	Accumulated volume, including unit
<i>Event</i>	Logbook event
<i>EventType</i>	Event type
<i>EventSubType</i>	Subtype of event

6 UNICORN OPC Historical Data Access address space

6.4 UNICORN OPC HDA XML format definition

6.4.5 SignatureList, v 1.0

6.4.5 SignatureList, v 1.0

This XML structure is exported by reading the **Method Signatures** and **Result Signatures** leaves.

SignatureList XML structure

Tag name	Description
<i>SignatureList</i>	Root item
<i>Signature</i>	A signature
<i>Username</i>	Name of user
<i>Fullname</i>	Full name of user
<i>Position</i>	Position of user
<i>Date</i>	Date, formatted in server local time
<i>Meaning</i>	Signature meaning
<i>Locked</i>	If present, the file is locked against further change

6.4.6 SnapshotList, v 1.0

This XML structure is exported by reading the **Snapshot** leaf.

Note: To get the actual y-axis value, use the time or volume value as a reference into the curves.

SnapshotList XML structure

Tag name	Description
SnapshotList	Root item
Chromatogram	A signature
Name	Name of chromatogram
Snapshot	Run number
TimeRetention	Time retention
VolumeRetention	Volume retention
Curve	Curve
Name	Curve name
Unit	Curve unit
Time Value	Time stamp of snapshot
Volume Value	Volume stamp of snapshot

6 UNICORN OPC Historical Data Access address space

6.4 UNICORN OPC HDA XML format definition

6.4.7 UsedComponents, v 1.0

6.4.7 **UsedComponents, v 1.0**

This XML structure is exported by reading the **Result Strategy Used Components** leaf.

UsedComponents XML structure

Tag name	Description
<i>UsedComponents</i>	Root item.
<i>Component</i>	Component name used during run.

6.4.8 Notes, v 1.0

This XML structure is exported by reading the **Method Notes**, **Start Notes**, **Run Notes** and **Evaluation Notes** leaves.

Notes XML structure

Tag name	Description
Notes	Root item, the note follows.

6 UNICORN OPC Historical Data Access address space

6.4 UNICORN OPC HDA XML format definition

6.4.9 ScoutingList, v 1.1

6.4.9 ScoutingList, v 1.1

This XML structure is exported by reading the **Scouting** leaf.

Note: To get the actual y-axis value, use the time or volume value as a reference into the curves.

ScoutingList XML structure

Tag name	Description
ScoutingList	Root item.
Scouting	A scouting run.
TotalNumberOfScoutings	Total number of scouting items available.
RunScouting	If available, this item indicates the scouting run number of this result file.
Run	Run number.
ThisScoutingWasUsedDuringRun	This leaf is available if this scouting run was used when the method was run. The run number is the same as RunScouting .
Variable	Variables defined in this run.
Block	Block name of this variable.
Name	Name of variable.
Unit	Unit, only included if variable has a unit.
Value	Value of variable.

6.4.10 SettingsList, v 1.0

This XML structure is exported by reading the **System Settings** leaf.

SettingsList XML structure

Tag name	Description
<i>SettingsList</i>	Root item.
<i>Group</i>	A group.
<i>GroupName</i>	The name of the group.
<i>Instruction</i>	Instruction names. There is at least one instruction per group.

6 UNICORN OPC Historical Data Access address space

6.4 UNICORN OPC HDA XML format definition

6.4.11 TextInstructions, v 1.0

6.4.11 TextInstructions, v 1.0

This XML structure is exported by reading the ***Text Instructions*** leaf.

TextInstructions XML structure

Tag name	Description
<i>TextMethod</i>	Root item, the complete text method follows. Each row is separated by a carriage return and a new line.

6.4.12 VariableList, v 1.1

This XML structure is exported by reading the **Variables** leaf.

Start protocol variables XML structure

Tag name	Description
VariableList	Root item.
Variable	A variable.
Block	Block name of the variable.
Name	The variable name.
VisibleInScouting	Indicates if the variable is visible in scouting.
VisibleInDetails	Indicates if the variable is visible in details only.
Value	Value. Can be a number or a string, depending on the variable.
Unit	Unit of the value. Not included if no unit is present.

6 UNICORN OPC Historical Data Access address space

6.4 UNICORN OPC HDA XML format definition

6.4.13 QuestionList, v 1.0

6.4.13 QuestionList, v 1.0

This XML structure is exported by reading the **Questions** leaf.

Start protocol questions XML structure

Tag name	Description
<i>QuestionList</i>	Root item
<i>Item</i>	A question item
<i>Question</i>	The question
<i>Answer</i>	The answer

6.4.14 PeakTable, v 1.1

This XML structure is exported by reading leaves under the **PEAK TABLES** branch.

PeakTable XML structure

Tag name	Description
<i>PeakTable</i>	Root item
<i>Summary</i>	Summary of the peak table
<i>TotalNumberOfDetectedPeaks</i>	Total number of peaks
<i>TotalArea</i>	Total area
<i>Unit</i>	Unit used.
<i>AreaInEvaluatedPeaks</i>	Area in evaluated peaks
<i>RationPeakareaTotalarea</i>	Ratio peak area/total area
<i>TotalPeakDuration</i>	Total peak duration
<i>ColumnHeight</i>	Column height
<i>ColumnV0</i>	Column V ₀
<i>ColumnVt</i>	Column V _t
<i>SourceCurve</i>	Source curve name
<i>Baseline</i>	Baseline
<i>Rejection</i>	Rejection
<i>MinHeight</i>	Minimum height
<i>MinWidth</i>	Minimum width
<i>MaxWidth</i>	Maximum width
<i>MinArea</i>	Minimum area
<i>MaxNumberOfPeaks</i>	Maximum number of peaks
<i>Quantitation</i>	Quantitation (molecular size, standard addition, internal standard, external standard, recovery)
<i>Peak</i>	A peak
<i>No</i>	Peak number

6 UNICORN OPC Historical Data Access address space

6.4 UNICORN OPC HDA XML format definition

6.4.14 PeakTable, v 1.1

Tag name	Description
<i>Name</i>	Peak name
<i>Retention</i>	Retention
<i>Start</i>	Start
<i>End</i>	End
<i>Width</i>	Width
<i>Area</i>	Area
<i>AreaPerTotalArea</i>	Area/total area
<i>AreaPerPeakArea</i>	Area/peak area
<i>Height</i>	Height
<i>WidthAtHalfHeight</i>	Width at half peak height
<i>HeightAtStart</i>	Height at start
<i>HeightAtEnd</i>	Height at end
<i>BaselineAtStart</i>	Baseline at start
<i>BaselineAtMax</i>	Baseline at max
<i>BaselineAtEnd</i>	Baseline at end
<i>ConductivityHeightStart</i>	Conductivity height at start
<i>ConductivityHeightMax</i>	Conductivity height at maximum
<i>ConductivityHeightEnd</i>	Conductivity height at end
<i>FractionTubeAtStart</i>	Fraction tube at start
<i>FractionTubeAtMax</i>	Fraction tube at maximum
<i>FractionTubeAtEnd</i>	Fraction tube at end
<i>PeakStartType</i>	Peak start type (dropline, skim, baseline, skimdrop, unknown)
<i>PeakEndType</i>	Peak end type (dropline, skim, baseline, skimdrop, unknown)
<i>Sigma</i>	Sigma
<i>Resolution</i>	Resolution

Tag name	Description
<i>CapacityFactor</i>	Capacity factor
<i>Kav</i>	K_{av}
<i>PlateHeight</i>	Plate height
<i>PlatesPerMeter</i>	Plates per meter
<i>AsymmetryStart</i>	Asymmetry start
<i>AsymmetryEnd</i>	Asymmetry end
<i>Asymmetry</i>	Asymmetry
<i>AverageConductivity</i>	Average conductivity
<i>ExtinctionCoefficient</i>	Extinction coefficient
<i>ExtCoeffConcentration</i>	Concentration calculated using extinction coefficient.
<i>ExtCoeffAmount</i>	Amount calculated using extinction coefficient.
<i>Concentration</i>	Concentration
<i>Amount</i>	Amount
<i>MolecularSize</i>	Molecular size
<i>Type</i>	Type

6 UNICORN OPC Historical Data Access address space

6.4 UNICORN OPC HDA XML format definition

6.4.15 Unicorn raw, v 1.0

6.4.15 Unicorn raw, v 1.0

This XML structure is exported by reading the attribute **HDA_UNICORN_RAW_DATA** for a *Curve* leaf.

UnicornRawData XML structure

Tag name	Description
<i>UnicornRawData</i>	Root item.
<i>Name</i>	Name of curve.
<i>Type</i>	Curve type. Does not contain the bit mask, which the HDA_CURVE_TYPE does, only the actual type.
<i>Unit</i>	Curve unit (y-axis).
<i>TimeUnit</i>	Unit of time curve (x-axis).
<i>VolumeUnit</i>	Unit of volume curve (x-axis).
<i>CurveMin</i>	Minimum value of y-axis.
<i>CurveMax</i>	Maximum value of y-axis.
<i>ZeroAdjust</i>	Present if zero adjust is enabled.
<i>ZeroAdjustTime</i>	Zero adjust time.
<i>ZeroAdjustVolume</i>	Zero adjust volume.
<i>StartTimeRetention</i>	Retention start time.
<i>InjectionTimeRetention</i>	Injection start time.
<i>NumberOfTimeDataPoints</i>	Number of curve time data points.
<i>CTD</i>	Curve Time Data. This is repeated for all time data points. The values are assigned as attributes to the tag (x and y attributes).
<i>StartVolumeRetention</i>	Retention start volume.
<i>InjectionVolumeRetention</i>	Injection start volume.
<i>NumberOfVolumeDataPoints</i>	Number of curve volume data points.
<i>ColumnVolumeDefined</i>	Present if column volume is defined.
<i>ColumnVolume</i>	Column volume value for curve.

6 UNICORN OPC Historical Data Access address space

6.4 UNICORN OPC HDA XML format definition

6.4.15 Unicorn raw, v 1.0

Tag name	Description
<i>ColumnVolumeUnit</i>	Unit of <i>ColumnVolume</i> curve (X-axis).
<i>CVD</i>	Curve Volume Data. This is repeated for all volume data points. The values are assigned as attributes to the tag (<i>x</i> , <i>y</i> and, if available, <i>cv</i>).
<i>CMD</i>	Curve Markers Data. This is repeated for all marker (text) data points. The values are assigned as attributes to the tag (<i>t</i> = time, <i>v</i> = volume, <i>t1</i> = text1 and, if available, <i>t2</i> = text2).

6 UNICORN OPC Historical Data Access address space

6.4 UNICORN OPC HDA XML format definition

6.4.16 Columns, v 1.1

6.4.16 Columns, v 1.1

This XML structure is exported by reading the **Columns** leaf.

Columns XML structure

Tag name	Description
Columns	Root item.
Column	A column.
Name	Name of column.
Height	Height of column. Attribute mandatory defines if item is mandatory. Attribute unit defines unit of value.
Diameter	Diameter of column. Attribute mandatory defines if item is mandatory. Attribute unit defines unit of value.
Volume	Volume of column. Attribute mandatory defines if item is mandatory. Attribute unit defines unit of value.
VolumeUnit	Height of column. Attribute mandatory defines if item is mandatory.
Technique	Technique used by column. Attribute mandatory defines if item is mandatory.
Vt	Total volume of column. Attribute mandatory defines if item is mandatory. Attribute unit defines unit of value.
Vo	Empty volume of column. Attribute mandatory defines if item is mandatory. Attribute unit defines unit of value.
MaxPressure	Maximum pressure of column. Attribute mandatory defines if item is mandatory. Attribute unit defines unit of value.
DefaultFlowrate	Default flow rate of column. Attribute mandatory defines if item is mandatory. Attribute unit defines unit of value.
MaxFlowrate	Maximum flow rate of column. Attribute mandatory defines if item is mandatory. Attribute unit defines unit of value.
TypPeakWidthAt-Base	Typical peak width at base. Attribute mandatory defines if item is mandatory. Attribute unit defines unit of value.
pHLongMax	Long-term maximum pH. Attribute mandatory defines if item is mandatory.

Tag name	Description
<i>pHLongMin</i>	Long-term minimum pH. Attribute mandatory defines if item is mandatory.
<i>pHShortMax</i>	Short-term maximum pH. Attribute mandatory defines if item is mandatory.
<i>pHShortMin</i>	Short-term minimum pH. Attribute mandatory defines if item is mandatory.
<i>AverageParticleDiameter</i>	Average particle diameter. Attribute mandatory defines if item is mandatory. Attribute unit defines unit of value.
<i>Code</i>	Code of column. Attribute mandatory defines if item is mandatory.
<i>TypicalLoadingRange</i>	Typical loading range. Attribute mandatory defines if item is mandatory.
<i>MolWeightRange</i>	Molecular weight range. Attribute mandatory defines if item is mandatory. Attribute unit defines unit of value.

6 UNICORN OPC Historical Data Access address space

6.4 UNICORN OPC HDA XML format definition

6.4.17 EvaluationProcedures, v1.0

6.4.17 EvaluationProcedures, v1.0

This XML structure is exported by reading the **Evaluation procedure** leaf.

EvaluationProcedures XML structure

Tagname	Description
<i>EvaluationProcedures</i>	Root item.
<i>EvaluationProcedure</i>	An evaluation procedure.
<i>Name</i>	Name of evaluation procedure.
<i>WasRun</i>	Indicates if the evaluation procedure was run during method run.

6.4.18 FracXY, v 1.0

This XML structure is exported by reading the **FracXY** leaf.

FracXY XML structure

Tagname	Description
FracXY	Root item
FractionOrder	Fraction order (Serpentine row, Row-by-row, Serpentine column or Column-bycolumn)
Name	Name of rack
Group	Rack group
Name	Name of rack group
LastTube	Last tube of group

6 UNICORN OPC Historical Data Access address space

6.4 UNICORN OPC HDA XML format definition

6.4.19 AuditTrail, v 1.1

6.4.19 AuditTrail, v 1.1

This XML structure is exported by reading a **Global Logbook** or **System Logbook** leaf.

AuditTrail XML structure

Tag name	Description
<i>AuditTrail</i>	Root item.
<i>Type</i>	Type of audit trail: Global , System or Backup . Backup is used when accessing a direct audit trail file address.
<i>CheckSumError</i>	If this item is available, the file has been modified outside UNICORN or is corrupt.
<i>Audit</i>	An audit item.
<i>Time</i>	Time of audit.
<i>TimeZone</i>	Time zone.
<i>Message</i>	Audit message.
<i>Details</i>	Log entry details.

6.4.20 Method/Result Instrument Configuration, v 1.0

This XML structure is exported by reading a ***Method Instrument Configuration*** or ***Result Instrument Configuration*** leaf.

Method/Result Instrument Configuration XML structure

Tag name	Description
<i>InstrumentConfiguration</i>	Root item
<i>Name</i>	Name of instrument configuration
<i>Version</i>	Instrument configuration version
<i>Help text</i>	Instrument configuration help text
<i>StrategyName</i>	The instrument configuration name
<i>StrategyNotes</i>	The instrument configuration notes
<i>PhaseConfiguration</i>	Phase configuration name and version
<i>TemplateMethodConfiguration</i>	Protocol configuration name and version
<i>PerformanceTestConfiguration</i>	Performance test configuration name and version
<i>FlowSchemeConfiguration</i>	Flow scheme configuration name and version
<i>VIDConfiguration</i>	VID configuration name and version
<i>FirmwareConfiguration</i>	Firmware configuration name and version
<i>CompatibleUNICORNClientVersion</i>	UNICORN version
<i>CompatibleUNICORNInstrumentServerVersion</i>	UNICORN version

6 UNICORN OPC Historical Data Access address space

6.4 UNICORN OPC HDA XML format definition

6.4.21 System

6.4.21 System

This XML structure is exported by reading a **System** leaf.

System XML structure

Tag name	Description
<i>SystemName</i>	Name of system.
<i>SystemType</i>	Type of system.
<i>InstrumentConfiguration</i>	Instrument configuration name and version.
<i>SystemIsNonActive/SystemIsActive</i>	Active system.
<i>ControlledByUNICORNInstrumentServer</i>	Instrument server computer name. Note: Displayed only if the system is Active.
<i>InstrumentSerialNo</i>	Instrument serial number.
<i>ConnectionBasedOnSerial/ ConnectionBasedOnIP</i>	Type of connection based on serial number or instrument IP address.
<i>InstrumentIPAddress</i>	Instrument IP address.

7 Reference Information

In this chapter

This chapter contains the following sections:

Section	See page
7.1 DA server supported OPC interfaces	114
7.2 AE server supported OPC interfaces	116
7.3 HDA server supported OPC interfaces	117
7.4 Differences between UNICORN OPC 5.x and UNICORN OPC 7.0	118

7 Reference Information

7.1 DA server supported OPC interfaces

7.1 DA server supported OPC interfaces

OPC Server

Interface	1.0	2.05A	3.0	Optional interface
<i>IUnknown</i>	Required	Required	Required	
<i>IOPCServer</i>	Required	Required	Required	
<i>IOPCCommon</i>	N/A	Required	Required	
<i>IConnectionPointContainer</i>	N/A	Required	Required	
<i>IOPCItemProperties</i>	N/A	Required	N/A	
<i>IOPCBrowse</i>	N/A	N/A	Required	
<i>IOPCServerPublicGroups</i>	Optional	Optional	N/A	Not implemented
<i>IOPCBrowseAddressSpace-Browse</i>	Optional	Optional	N/A	Not implemented
<i>IOPCItemIO</i>	N/A	N/A	Required	Implemented

OPCGroup

Interface	1.0	2.05A	3.0	Optional interface
<i>IUnknown</i>	Required	Required	Required	
<i>IOPCItemMgt</i>	Required	Required	Required	
<i>IOPCGroupStateMgt</i>	Required	Required	Required	
<i>IOPCGroupStateMgt2</i>	N/A	N/A	Required	
<i>IOPCPublicGroupStateMgt</i>	Optional	Optional	N/A	Not implemented
<i>IOPCSyncIO</i>	Required	Required	Required	
<i>IOPCSyncIO2</i>	N/A	N/A	Required	
<i>IOPCAsyncIO2</i>	N/A	Required	Required	

Interface	1.0	2.05A	3.0	Optional interface
<i>IOPCAsyncIO3</i>	N/A	N/A	Required	
<i>IOPCItemDeadbandMgt</i>	N/A	N/A	Required	
<i>IOPCItemSamplingMgt</i>	N/A	N/A	Optional	Implemented
<i>IConnectionPointContainer</i>	N/A	Required	Required	
<i>IOPCAsyncIO</i>	Required	Optional	N/A	
<i>IDataObject</i>	Required	Optional	N/A	

7 Reference Information

7.2 AE server supported OPC interfaces

7.2 AE server supported OPC interfaces

OPCEventServer

Interface	AE v1.1	Optional interface
<i>IOPCEventServer</i>	Required	
<i>IOPCEventServer2</i>	Optional	Not implemented
<i>IOPCEventAreaBrowser</i>	Optional	Implemented

OPCEventSubscription Object

Interface	AE v1.1	Optional interface
<i>IUnknown</i>	Required	
<i>IOPCEventSubscriptionMgt</i>	Required	
<i>IConnectionPointContainer</i>	Required	
<i>IOPCEventSubscriptionMgt2</i>	Optional	Not implemented

OPC Common Requirements

Interface	AE v1.1	Optional interface
<i>IOPCCCommon</i>	Required	

7.3 HDA server supported OPC interfaces

Custom Interface

Interface	HDA v1.20	Optional interface
<i>IOPC_HDAServer</i>	Required	
<i>IOPCHDA_Browser</i>	Required	
<i>IOPCHDA_SyncRead</i>	Required	
<i>IOPCCommon</i>	Required	
<i>IOPCHDA_SyncUpdate</i>	Optional	Not implemented
<i>IOPCHDA_SyncAnnotations</i>	Optional	Not implemented
<i>IOPCHDA_AsyncRead</i>	Optional	Not implemented
<i>IOPCHDA_AsyncUpdate</i>	Optional	Not implemented
<i>IOPCHDA_AsyncAnnotations</i>	Optional	Not implemented
<i>IOPCHDA_Playback</i>	Optional	Not implemented
<i>IConnectionPointContainer</i>	Required if any Async interface is supported	Not implemented

OPC Security Requirements

Interface	HDA v1.2	Optional interface
<i>IOPCSecurityPrivate</i>	Required	

7 Reference Information

7.4 Differences between UNICORN OPC 5.x and UNICORN OPC 7.0

7.4 Differences between UNICORN OPC 5.x and UNICORN OPC 7.0

OPC server

Feature	OPC 5.x	OPC 7.0
Number of OPC servers supported per UNICORN Instrument Server computer ¹	4	1
OPC servers (DA & AE)	External	part of OPC service inside the UNICORN Instrument Server
HDA memory cache	Yes	No
HDA file cache	Yes	No

Data Access

Feature	OPC 5.x	OPC 7.0
Support for DA 3.0 interface	No	Yes
Ability to handle asynchronous commands from client	Yes	Yes ²
Method queueing	No	Yes
Zero deadband feature	Yes	No
Quaternary gradient variables	No	Yes
Perform scouting runs from OPC	No	Yes

¹ ÄKTAprocess™ and ÄKTApilot™ only

² Better handling since the commands are also queued up.

Historical Data Access

Feature	OPC 5.x	OPC 7.0
Support for multiple HDA clients	Yes	No
Support browsing through all systems	No	Yes
Display instrument configuration (strategy) details.	No	Yes

Alarms & Events

Feature	OPC 5.x	OPC 7.0
<i>RunLog</i> event	Condition event	Simple event
Support for events like Accumulated time and Accumulated volume	Yes	No
Restart error event	No	Yes

Security

Feature	OPC 5.x	OPC 7.0
Automatic creation of the OPC user	No	Yes
Support for access group based login for UNICORN users	No	Yes

For local office contact information, visit
www.gelifesciences.com/contact

GE Healthcare Bio-Sciences AB

Björkgatan 30
751 84 Uppsala
Sweden

www.gelifesciences.com/unicorn

ÄKTAprocess, ÄKTApilot, GE, GE monogram and UNICORN are trademarks of General Electric Company.

Microsoft and Windows are registered trademarks of Microsoft Corporation.

All other third party trademarks are the property of their respective owner.

Any use of UNICORN is subject to GE Healthcare Standard Software End-User License Agreement for Life Sciences Software Products. A copy of this Standard Software End-User License Agreement is available on request.

UNICORN 7 © 2009-2016 General Electric Company

© 2016 General Electric Company.

First published Mar. 2016

All goods and services are sold subject to the terms and conditions of sale of the company within GE Healthcare which supplies them. A copy of these terms and conditions is available on request. Contact your local GE Healthcare representative for the most current information.

GE Healthcare Europe GmbH
Munzinger Strasse 5, D-79111 Freiburg, Germany

GE Healthcare UK Limited
Amersham Place, Little Chalfont, Buckinghamshire, HP7 9NA, UK

GE Healthcare Bio-Sciences Corp.
100 Results Way, Marlborough, MA 01752, USA

GE Healthcare Pharmacon, Inc.
2650 Crescent Dr., Lafayette, CO 80026, USA

HyClone Laboratories, Inc.
925 W 1800 S, Logan, UT 84321, USA

GE Healthcare Japan Corporation
Sanken Bldg. 3-25-1, Hyakunincho Shinjuku-ku, Tokyo 169-0073, Japan

